



# Grandstream Networks, Inc.

# GXV3240 IP Multimedia Phone for Android™ User Guide





This page intentionally left blank



# **GXV3240 User Guide**

# Index

DOCUMENT PURPOSE	11
GNU GPL INFORMATION	12
CHANGE LOG	13
FIRMWARE VERSION 1.0.3.6	13
FIRMWARE VERSION 1.0.1.54	13
FIRMWARE VERSION 1.0.1.39	
FIRMWARE VERSION 1.0.1.29	13
PRODUCT OVERVIEW	17
FEATURE HIGHTLIGHTS	17
GXV3240 TECHNICAL SPECIFICATIONS	17
INSTALLATION	21
EQUIPMENT PACKAGING	21
CONNECT YOUR PHONE	
GXV3240 EXTENSION MODULE (GXP2200EXT)	23
SAFETY COMPLIANCES	24
WARRANTY	25
GETTING TO KNOW GXV3240	27
USE THE TOUCHSCREEN	27
USE THE DESKTOP	29
DESKTOP MENU	29
ADD APPLICATION SHORTCUT TO DESKTOP	30
ADD WIDGET TO DESKTOP	
MANAGE DESKTOP ITEMS	
SET WALLPAPERS	
MANAGE RUNNING APPLICATIONS	
IDLE SCREEN	
SET UP IDLE SCREENS	
USE THE STATUS BAR	
NOTIFICATIONS IN STATUS BAR	
SYSTEM SETTINGS IN STATUS BAR	



USE THE KEYPAD	44
KEYPAD BUTTONS	44
KEYPAD SHORTCUT FUNCTIONS	45
USE THE ONSCREEN KEYBOARD	45
USE THE MESSAGE WAITING INDICATOR	46
MAKE PHONE CALLS	49
REGISTER SIP ACCOUNTS	49
ACCOUNT STATUS	49
CONFIGURE SIP ACCOUNT	49
SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT	50
DIAL A NUMBER DIRECTLY	51
REDIAL	52
DIAL A NUMBER VIA CONTACT	52
DIAL A NUMBER VIA CALL HISTORY	53
DIRECT IP CALL	54
ANSWER A CALL	55
SINGLE INCOMING CALL	55
MULTIPLE CALLS/CALL WAITING	57
CALL HOLD	58
CALL RECORDING	58
MUTE	59
TURN ON VIDEO DURING AUDIO CALL	60
SWITCH AUDIO CHANNEL DURING CALL	61
CALL TRANSFER	62
BLIND TRANSFER	62
AUTO-ATTENDED TRANSFER	63
ATTENDED TRANSFER	65
6-WAY CONFERENCE	66
INITIATE CONFERENCE	66
REMOVE PARTY FROM CONFERENCE	68
END CONFERENCE	69
HOLD AND RESUME CONFERENCE	69
AUTO CONFERENCE MODE	69
MISSED CALL	69
DND (DO NOT DISTURB)	70
VOICEMAIL/MESSAGE WAITING INDICATION	
CALL FORWARD	
MULTI-PURPOSE KEYS	
SHARED CALL APPEARANCE (SCA)	
CALL FEATURES	



CONTACTS	81
LOCAL CONTACTS	82
ADD SINGLE CONTACTS	82
IMPORT/EXPORT CONTACTS	83
DOWNLOAD CONTACTS	85
SEARCH CONTACTS	86
USE CONTACTS	86
MAKE A CALL TO CONTACTS	86
SEND SMS MESSAGE TO CONTACTS	86
SELECT CONTACTS	86
ADD CONTACTS TO FAVORITES	87
EDIT CONTACTS	88
SEND CONTACTS TO DESKTOP SHORTCUT	88
SHARE CONTACTS VIA BLUETOOTH	88
ADD CONTACTS TO BLACKLIST	89
ADD GROUP	89
CONTACTS STORAGE STATUS	90
ADD ACCOUNT TO SYNC UP CONTACTS	
LDAP BOOK	93
BOADRWORKS XSI CONTACTS	94
BLACKLIST	95
BLOCK HISTORY	95
RESTORE BLOCKED NUMBER	
DELETE BLOCK HISTORY	96
EDIT BLACKLIST	96
ADD BLACKLIST	96
EDIT BLACKLIST	97
DELETE BLACKLIST	98
BLACKLIST SETTINGS	98
CALL HISTORY	101
LOCAL CALL HISTORY	101
DIAL OUT FROM CALL HISTORY	
CALL HISTORY OPTIONS	
DELETE CALL HISTORY	
CALL HISTORY DETAILS	
BROADWORKS XSI CALL HISTORY	
SMS	105



VIEW SMS	105
CREATE NEW SMS	106
DELETE SMS	107
CALENDAR	109
SIGN IN CALENDAR	109
VIEW CALENDAR	109
CREATE EVENT	111
CALENDAR OPTIONS	111
EMAIL	113
SIGN IN EMAIL	113
EMAIL OPTIONS	116
SEND EMAIL	116
SEARCH EMAIL	116
EMAIL FOLDERS	116
MULTIPLE EMAIL ACCOUNTS	116
GS MARKET	119
VIEW APPS	119
SEARCH APPS	119
DOWNLOAD AND INSTALL APPS	120
UPDATE APPS	120
UNINSTALL APPS	121
TOOLS	123
FILE MANAGER	123
COPY AND PASTE FILES	123
MOVE FILES	124
SEND FILES	126
DELETE FILES	127
RENAME A FILE	128
FTP SERVER	129
RECORDER	130
NORMAL RECORDER	131
CALL RECORDER	132
DOWNLOADS	133
IP LOCATION	134
DIAGNOSIS	134
CAMERA	137



TAKE PICTURE	137
RECORD VIDEO	137
CAMERA SETTINGS	138
ANGLE ADJUSTMENT	138
MULTIMEDIA	139
GALLERY	139
MUSIC	141
PLAY MUSIC	141
EDIT MUSIC	142
SORT MUSIC	143
SEARCH MUSIC	144
CREATE PLAYLIST	144
EDIT PLAYLIST	144
BROWSER	145
RSS NEWS	147
ADD RSS WIDGET	147
USE RSS WIDGET	147
RSS WIDGET SETTINGS	148
WEATHER	149
ADD WEATHER WIDGET	149
USE WEATHER WIDGET	149
WEATHER SETTINGS	150
CONNECT TO NETWORK AND DEVICES	153
ETHERNET	153
WI-FI	153
TURN ON/OFF WI-FI	
ADD WI-FI NETWORKS	154
BLUETOOTH	155
TURN ON/OFF BLUETOOTH	156
CHANGE BLUETOOTH DEVICE NAME	156
PAIR GXV3240 WITH A BLUETOOTH DEVICE	156
UNPAIR A BLUETOOTH DEVICE	157
EHS HEADSET	157
USB	158
SD CARD	158
HDMI DEVICE	158
EXPERIENCING THE GXV3240 APPLICATION PH	IONE161



# Table of Tables GXV3240 User Guide

Table 1: GXV3240 Technical Specifications	17
Table 2: GXV3240 Equipment Packaging	2 <sup>2</sup>
Table 3: GXV3240 Connectors	22
Table 4: GXP2200EXT Packaging	23
Table 5: GXV3240 Status Bar Notification Icons	39
Table 6: GXV3240 Keypad Buttons	44
Table 7: GXV3240 MWI LED Status	47
Table 8: GXV3240 Feature Code	77



# Table of Figures GXV3240 User Guide

Figure 1: GXV3240 Front View	22
Figure 2: GXV3240 Back View	22
Figure 3: GXV3240 Back View with GXP2200EXT	24
Figure 4: GXV3240 Default Home Screen	27
Figure 5: GXV3240 Onscreen Menu	28
Figure 6: GXV3240 Finger Gestures on the Touch Screen	28
Figure 7: GXV3240 Desktop Menu	30
Figure 8: Add Application Shortcut to the Desktop	31
Figure 9: Add Widget to the Desktop	32
Figure 10: Open Clock Widget	33
Figure 11: Resize Digital Clock Widget	33
Figure 12: Remove Clock Widget from Desktop	34
Figure 13: GXV3240 Choose Wallpaper	35
Figure 14: GXV3240 Recent Applications	36
Figure 15: Set Up Home Idle Screen	37
Figure 16: Delete Idle Screen	38
Figure 17: GXV3240 Top Status Bar	38
Figure 18: GXV3240 Top Status Bar - Notification	39
Figure 19: System Settings in Status Bar	43
Figure 20: GXV3240 Keyboard	44
Figure 21: GXV3240 Onscreen Keyboard - English Keyboard	46
Figure 22: English Keyboard - Number and Symbols	46
Figure 23: GXV3240 Account Widget	49
Figure 24: GXV3240 Dial Screen	50
Figure 25: GXV3240 Programmable Keys	51
Figure 26 GXV3240 View Contacts	53
Figure 27 GXV3240 Call History	54
Figure 28 Direct IP Call	54
Figure 29: Single Incoming Call - Audio	55
Figure 30: Single Incoming Call - Video	56
Figure 31: Single Incoming Call – Preview-1	56
Figure 32: Single Incoming Call – Preview-2	57
Figure 33: Call Waiting	57
Figure 34: Call On Hold	58
Figure 35: GXV3240 Call Recording	59
Figure 36: GXV3240 Call Mute	59
Figure 37: Turn on Video during Audio Call	60
Figure 38: Accept Video during Audio Call	61



Figure 39: Switch Audio Channel during Call	62
Figure 40: Switch Audio Channel during Call - Connected	62
Figure 41: Blind Transfer	63
Figure 42: Auto Attended Transfer	64
Figure 43: Auto Attended Transfer - Transferring	64
Figure 44: Auto Attended Transfer - Split	65
Figure 45: Attended Transfer	66
Figure 46: GXV3240 Conference Screen	67
Figure 47: GXV3240 Conference - Add New Call to the Conference	67
Figure 48: GXV3240 Conference - Add Existing Call to Conference	68
Figure 49: 4-way Conference Call Established	
Figure 50: Missed Call Screen	
Figure 51: Enable/Disable DND	71
Figure 52: Retrieve Voicemail	
Figure 53: Call Forward - Unconditional	73
Figure 54: Call Forward - Time Based	73
Figure 55: Call Forward - Busy/No Answer	73
Figure 56: GXV3240 MPK APP - Add Number	74
Figure 57: GXV3240 MPK APP - Add Number from Contacts	74
Figure 58: GXV3240 MPK APP - Number List	75
Figure 59: GXV3240 SCA Settings on LCD	76
Figure 60: GXV3240 SCA Settings on Web UI	76
Figure 61: GXV3240 Main Page of Contacts	81
Figure 62: GXV3240 Local Contacts	82
Figure 63: GXV3240 Contacts - Add New Contact	83
Figure 64: GXV3240 Contacts - Import Contacts	84
Figure 65: GXV3240 Contacts - Export Contacts	84
Figure 66: GXV3240 Contacts - Download Contacts	85
Figure 67: GXV3240 Contacts - Select Contacts	87
Figure 68: GXV3240 Contacts - Contacts Options	87
Figure 69: Add Contacts to Favorites	88
Figure 70: GXV3240 Contacts - Add New Group	89
Figure 71: GXV3240 Contacts - Contact Options	90
Figure 72: GXV3240 Contacts - Storage Status	91
Figure 73: GXV3240 Contacts Options- Account	92
Figure 74: Add Account to Sync up in Contact	92
Figure 75: Add Google Account to Sync up in Contact	93
Figure 76: Sign in Google Account	93
Figure 77: Restore Blocked Number	95
Figure 78: GXV3240 Blacklist - Add Blacklist	96
Figure 79: Manually Add Number to Blacklist	97



Figure 80: Edit Entry from Blacklist	98
Figure 81: Blacklist Settings	99
Figure 82: GXV3240 Main Page of Call History	101
Figure 83: GXV3240 Call History	102
Figure 84: GXV3240 Call History - Options	103
Figure 85: GXV3240 Call History - Details	104
Figure 86: GXV3240 SMS Message	105
Figure 87: View SMS Dialog	106
Figure 88: Create New Message	
Figure 89: Sign In Calendar with Google Account	109
Figure 90: View Calendar	110
Figure 91: View Calendar by Month	110
Figure 92: View Calendar by Day	111
Figure 93: Create Event	111
Figure 94: Sign In Email	113
Figure 95: Select Email Account Type	
Figure 96: Email Account Type - POP3	114
Figure 97: Email Account Type - IMAP	115
Figure 98: Email Account Type - EXCHANGE	115
Figure 99: Email Account Settings	116
Figure 100: Multiple Email Accounts	117
Figure 101: GXV3240 GS Market	119
Figure 102: GXV3240 GS Market - Downloaded Applications	120
Figure 103: GXV3240 GS Market - Installed Applications	121
Figure 104: GXV3240 GS Market - Uninstall Applications	121
Figure 105: GXV3240 File Manager	123
Figure 106: File Manager Root Directory	124
Figure 107: Paste File	124
Figure 108: GXV3240 File Manager	125
Figure 109: File Manager Root Directory	125
Figure 110: Paste File	126
Figure 111: GXV3240 File Manager	127
Figure 112: Delete File(s) via File Manager	128
Figure 113: Rename File	128
Figure 114: FTP Server - Start	129
Figure 115: FTP Server - Stop	130
Figure 116: FTP Server - Settings	130
Figure 117: Normal Recorder	131
Figure 118: Normal Recorder - Start Recording	132
Figure 119: Normal Recorder - End Recording	132
Figure 120: Call Recorder	133



Figure	121:	Downloads	133
Figure	122:	GXV3240 Location	134
Figure	123:	GXV3240 Diagnosis	135
Figure	124:	GXV3240 Camera	137
Figure	125:	GXV3240 Camera Settings	138
Figure	126:	GXV3240 Gallery	139
Figure	127:	GXV3240 Gallery - Edit Picture	140
Figure	128:	GXV3240 Gallery - Picture Options	140
Figure	129:	GXV3240 Music - Refresh Music List	142
Figure	130:	GXV3240 Music - Play a Song	142
Figure	131:	GXV3240 Music - Options	143
Figure	132:	GXV3240 Music - Sort Songs	143
Figure	133:	GXV3240 Music - Create Playlist	144
Figure	134:	GXV3240 Web Browser	145
Figure	135:	GXV3240 Browser Menu Options	146
Figure	136:	Open New Window in Browser	146
Figure	137:	GXV3240 Web Browser-Bookmarks	147
Figure	138:	GXV3240 RSS News	148
Figure	139:	GXV3240 RSS News Settings	149
Figure	140:	GXV3240 Weather	150
Figure	141:	GXV3240 Weather Settings	150
Figure	142:	GXV3240 Weather Update Settings	151
Figure	143:	GXV3240 Connect to Wi-Fi	154
Figure	144:	GXV3240 Connect to Wi-Fi Show Advanced Options	155
Figure	145:	GXV3240 Bluetooth - Paired Device	157
Figure	146:	Settings->Display->HDMI	159
Figure	147:	Settings->Display->HDMI Display Settings	159



## **DOCUMENT PURPOSE**

This User Guide describes the basic concept and tasks necessary to use and configure your GXV3240. This document covers the topics of phone installation, making basic calls, using phone's built-in applications and basic features. To learn the advanced features and configurations, please visit link <a href="http://www.grandstream.com/support">http://www.grandstream.com/support</a> to download the latest "GXV3240 Administration Guide".



## **GNU GPL INFORMATION**

GXV3240 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from: <a href="http://www.grandstream.com/support/faq/qnu\_gpl">http://www.grandstream.com/support/faq/qnu\_gpl</a>.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 12 of 161



#### **CHANGE LOG**

This section documents significant changes from previous versions of GXV3240 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

#### **FIRMWARE VERSION 1.0.3.6**

- Add WiFi Static IP and PPPoE Setting [ADD WI-FI NETWORKS]
- Add Set Programmable Keys On Unregistered Account [SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT]

#### FIRMWARE VERSION 1.0.1.54

- Add BroadWorks Xsi Contacts [BOADRWORKS XSI CONTACTS]
- Add BroadWorks Xsi Call History [BROADWORKS XSI CALL HISTORY]
- Add Preview for video calls Contacts [SINGLE INCOMING CALL]

#### FIRMWARE VERSION 1.0.1.39

Update screenshots

#### **FIRMWARE VERSION 1.0.1.29**

• This is the initial version.



#### WELCOME

Thank you for purchasing Grandstream GXV3240 IP Multimedia Phone for Android™. The GXV3240 combines a 6-line IP video phone with the power of a multi-platform video conferencing solution and the convenience of an Android smartphone to offer an all-in-one voice, video, data and mobility solution. The GXV3240 is a 6-line IP multimedia phone with a 4.3" capacitive touchscreen that runs on Android™ OS 4.2, which offers full access to the hundreds of thousands of Android apps in the Google Play Store including business productivity apps such as Skype™, Microsoft Lync™, Salesforce1™ and GoToMeeting™. The phone features dual Gigabit ports, HD audio and HD video, a built-in web browser, integrated Wi-Fi (802.11b/g/n) for network flexibility, PoE and a tiltable CMOS camera. The GXV3240 is compatible with the GXP2200 Extension Module, allowing for quick and easy access to up to 160 contacts at the touch of a finger. The GXV3240's integrated Bluetooth allows users to sync calendars and contacts between their mobile phone and the GXV3240, use hands-free Bluetooth headsets, and to transfer calls between the GXV3240 and their mobile phone. By combining a state-of-the-art IP phone, an advanced video conferencing solution, and the powerful Android operating system, businesses throughout the world can now use the GXV3240 for all communication and productivity needs.



# **A** Caution:

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.



# **Warning:**

Please do not use a different power adaptor with the GXV3240 as it may cause damage to the products and void the manufacturer warranty.

This document is subject to change without notice. The latest electronic version of this user manual is available for download here:

http://www.grandstream.com/support

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.



# **⚠** FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **RF Exposure Information (SAR)**

This device is designed and manufactured not to be exceeded the emission limits for exposure to radio frequency RF energy set by the Federal Communications Commission of the United States. The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate (SAR), and the SAR limit set by FCC is 1.6 W/kg.

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992, and has been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This device has been tested, and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body. RF exposure compliance with anybody-worn accessory, which contains metal, was not tested and certified, and use such bodyworn accessory should be avoided.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hereby, Grandstream declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



This page intentionally left blank



### **PRODUCT OVERVIEW**

#### **FEATURE HIGHTLIGHTS**

- 6 lines with up to 6 SIP accounts including FREE IPVideoTalk account with video mail, up to 6-way audio conference and 3-way video conference, phonebook with up to 1000 contacts, call history with up to 1000 records.
- Dual switched auto-sensing 10/100/1000Mbps Gigabit network ports, Wi-Fi (802.11b/g/n), PoE+, Bluetooth, USB, SD, HDMI, EHS with Plantronics headsets support, support for up to 4 cascaded GXP2200EXT modules.
- 4.3" (480x272) capacitive (5 points) touch screen TFT LCD, mega pixel CMOS sensor camera with privacy shutter.
- HD wideband audio, full-duplex hands-free speakerphone with advanced acoustic echo cancellation.
- Runs the Android™ Operating System 4.2 and offers full access to the Google Play Store which
  includes thousands of business productivity apps such as Skype, Microsoft Lync, SalesForce1, and
  GoToMeeting.
- Integrate with Grandstream's GXV series of IP video surveillance cameras to view live camera feeds and to receive alerts/alarms from IP cameras installed on the same network.
- Offers a multi-platform video conferencing solution (Grandstream's Free IPVideoTalk, Skype, Microsoft Lync, and more).
- Create Android apps for any business need to run on the GXV3240 using Google's API and Grandstream's SDK toolkit.

#### **GXV3240 TECHNICAL SPECIFICATIONS**

Table 1: GXV3240 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, NTP, STUN, SIMPLE, LLDP-MED, LDAP, TR-069, 802.1x, TLS, SRTP
Network Interfaces	Dual switched 10/100/1000 Mbps ports with integrated PoE
Graphic Display	4.3"(480×272) capacitive (5 points) touch screen TFT LCD
Camera	Tiltable mega pixel CMOS camera with privacy shutter
Bluetooth	Yes, integrated. Bluetooth 4.0 + EDR
Wi-Fi	Yes, integrated. 802.11b/g/n



Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), USB, SD, Mini HDMI, extension module port
Feature Keys	11 function keys for PHONEBOOK, BACKSPACE, HEADSET, MUTE, HOLD, MESSAGE, TRANSFER, CONFERENCE, SPEAKERPHONE, SEND/REDIAL, VOLUME. 3 dedicated Android keys for HOME, MENU, and BACK
Voice Codec	Support for G.711 $\mu$ /a, G.722 (wide-band), G.726-32, iLBC, Opus (pending), G.729 (pending), in-band and out-of-band DTMF (In audio, RFC2833, SIP INFO)
Video Codec and Capabilities	H.264 BP/MP/HP, video resolution up to 480p, frame rate up to 30 fps, bit rate up to 2Mbps, 3-way conference, anti-flickering, auto focus and auto exposure, PIP (Picture-in-Picture), on-screen-display, camera block, still picture capture/store, video recording, visual voice message indicator
Telephony Features	Hold, transfer, forward (unconditional/no-answer/busy), call park/pickup, 6-way audio conference, shared-call-appearance (SCA) / bridged-line-appearance (BLA), virtual MPK, downloadable phone book (XML, LDAP), call waiting, call history, boss-secretary virtual button, flexible dial plan, hot desking, personalized music ringtones, server redundancy & fail-over
Sample Applications	Skype, Google Hangouts, Microsoft Lync, Web browser, Adobe Flash, Facebook, Twitter, Youtube, news, weather, stock, Internet Radio, Pandora, Last.fm, Yahoo Flickr, Photobucket, alarm clock, Google calendar, mobile phone data import/export via Bluetooth, etc. API/SDK available for advanced custom application development
Applications Deployment	Allow various Android operating system 4.2 compliant applications to be developed, downloaded and run in the embedded device with provisioning control
HD Audio	Yes, both handset and speakerphone support HD (wide-band) audio
Base Stand	Yes, integrated stand with 2 adjustable angles. Wall mountable
Extension Module	Yes, can power up to 4 GXP2200EXT modules which feature a 128x384 graphic LCD, 20 quick-dial/BLF keys with dual-color LED, 2 navigation keys, and less than 1.2W power consumption per unit
QoS	Layer 2 QoS (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, TLS, SRTP (pending), HTTPS, 802.1x media access control
Multi-language	English, German, Italian, French, Spanish, Portuguese, Russian, Croatian, Chinese, Korean, Japanese, and more



Upgrade/ Provisioning	Firmware upgrade via TFTP / HTTP / HTTPS or local HTTP upload, mass provisioning using TR-069 or AES encrypted XML configuration file
Power and Green Energy Efficiency	Universal power adapter included: Input: 100-240VAC 50-60Hz; Output: 12VDC, 1.5A (18W); Integrated PoE+ (Power-over-Ethernet) 802.3at, Class 4
Physical	Dimension: 196.5mm (W) x 206.2mm (L) x 85.2mm (H) Unit weight: 0.92kg Package weight: 1.45kg
Temperature and Humidity	Operating: 0°C to 40°C Storage: -10°C to 60°C Humidity: 10% to 90% Non-condensing
Package Content	GXV3240 phone, handset with cord, base stand, universal power supply, network cable, lens cleaning cloth, quick installation guide, brochure, GPL license
Compliance	FCC: Part 15 (CFR47) Class B, Part15C, MPE, UL 60950 (Power Adapter) CE: EN55022 Class B, EN55024 Class B, EN61000-3-2, EN61000-3-3, EN60950-1, EN300-328, EN301-489, EN62311, EN62479, RoHS RCM: AS/ACIF S004, AS/NZS CISPR22/24 Class B, AS/NZS 60950, AS/NZS 4268, AS/NZS 4771

Firmware Version 1.0.3.6 GXV3240 User Guide Page 19 of 161



This page intentionally left blank



## **INSTALLATION**

#### **EQUIPMENT PACKAGING**

Table 2: GXV3240 Equipment Packaging

Main Case	1
Handset	1
Phone Cord	1
12V DC Power Adaptor	1
Ethernet Cable	1
Phone Stand	1
Wall Mount	1
Screen Cleaning Cloth	1
Quick Installation Guide	1

#### **CONNECT YOUR PHONE**

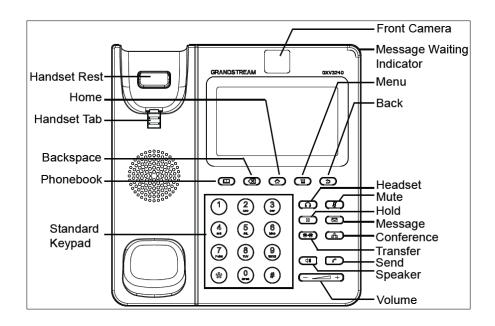




Figure 1: GXV3240 Front View

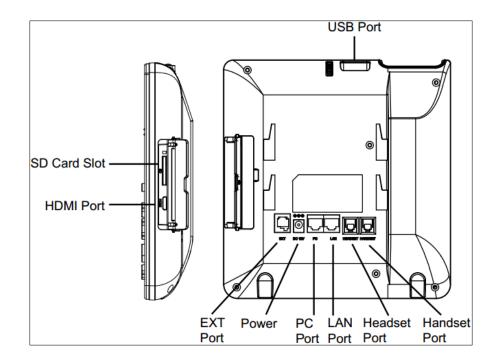


Figure 2: GXV3240 Back View

Table 3: GXV3240 Connectors

USB Port	USB devices can be connected via the USB port. For example, connect a USB flash drive to save captured pictures.
SD Card Slot	Connect SD storage device to the SD Card Slot.
HDMI Port	Connect display device to the HDMI port via HDMI cable.
<b>Headset Port</b>	RJ9 headset connector port.
<b>Handset Port</b>	RJ9 handset connector port.
PC Port	10/100/1000Mbps RJ-45 port connecting to PC.
LAN Port	10/100/1000Mbps RJ-45 port connecting to Ethernet.
Power Jack	12V DC Power connector port.
<b>EXT Port</b>	RJ11 connector port to connect the extension board GXP2200EXT.

To set up the GXV3240 as your desk phone, follow the steps below:



- 1. Attach the phone stand to the back of the phone where there is a slot for the phone stand. Upper part and bottom part are available for two angels;
- 2. Connect the handset and main phone case with the phone cord;
- 3. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;
- 4. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 3, this step could be skipped;
- 5. The LCD will display the booting up screen or firmware upgrading information. Before continuing, please wait for the main screen display to show up.

#### **GXV3240 EXTENSION MODULE (GXP2200EXT)**

The GXV3240 uses GXP2200EXT as the extension module. The extension module is an ideal solution for the busy enterprise environment looking to add the ability to receive and dispatch calls efficiently. Each GXP2200EXT extension module has 20 programmable buttons, LEFT and RIGHT buttons, supporting 40 Multiple Purpose Keys to be configured. GXV3240 supports up to 4 extension modules, adding 160 fully programmable phone extensions to the phone.

Table 4: GXP2200EXT Packaging

GXP2200EXT Board	1
GXP2200EXT Stand	1
RJ11-RJ11 Cable	1
Connector Plate	1
Screws	4
Quick Installation Guide	1



The GXP2200EXT is an additional accessory for the GXV3240. Therefore, the GXP2200EXT (including extension module accessories for installation) is not included in the GXV3240 box.

To set up the GXP2200EXT with the GXV3240, please follow the steps below:

Firmware Version 1.0.3.6 GXV3240 User Guide Page 23 of 161



- 1. On the back of the GXV3240 and the GXP2200EXT, there are slots for connector plate. Attach the connector plate between the slots for GXV3240 and the GXP2200EXT;
- 2. Apply the screws provided and securely tighten them in (See *Figure 3: GXV3240 Back View with GXP2200EXT*);
- 3. Connect the GXP2200EXT to the GXV3240 via the EXT port using the RJ11-RJ11 cable provided with the GXP2200EXT;
- 4. Install the phone stand on the GXV3240 and the GXP2200EXT;
- 5. Power up the GXV3240. The GXP2200EXT will show the booting up screen with version information and connecting status;
- 6. After successfully booting up, the GXP2200EXT will stay in idle. Press and hold the LEFT button for about 3 seconds to check the version information and status.

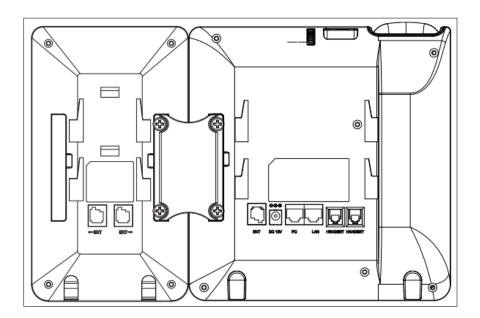


Figure 3: GXV3240 Back View with GXP2200EXT

The GXP2200EXT can be configured via the web GUI of the GXV3240 connected. After successfully configured, press LEFT or RIGHT button on the GXP2200EXT and users could browse all the MPK's status in different pages.

For more information on installing, connecting and configuring the GXP2200EXT with GXV3240, please refer to the GXP2200EXT user manual in <a href="http://www.grandstream.com/support">http://www.grandstream.com/support</a>.

#### **SAFETY COMPLIANCES**

Firmware Version 1.0.3.6 GXV3240 User Guide Page 24 of 161



The GXV3240 phone complies with FCC/CE and various safety standards. The GXV3240 power adapter is compliant with the UL standard. Use the universal power adapter provided with the GXV3240 package only. The manufacturer's warranty does not cover damages to the phone caused by unsupported power adapters.

#### **WARRANTY**

If the GXV3240 phone was purchased from a reseller, please contact the company where the phone was purchased for replacement, repair or refund. If the phone was purchased directly from Grandstream, please contact Grandstream Support for a RMA (Return Materials Authorization) number before the product is returned. Grandstream reserves the right to remedy warranty policy without prior notification.



# **Marning:**

Use the power adapter provided with the phone. Do not use a different power adapter as this may damage the phone. This type of damage is not covered under warranty.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 25 of 161



This page intentionally left blank



#### **GETTING TO KNOW GXV3240**

#### **USE THE TOUCHSCREEN**

When the phone boots up in HOME screen, the LCD will display as below. A registered account is shown in the following figure and users might need register their own account to have the account status displayed.

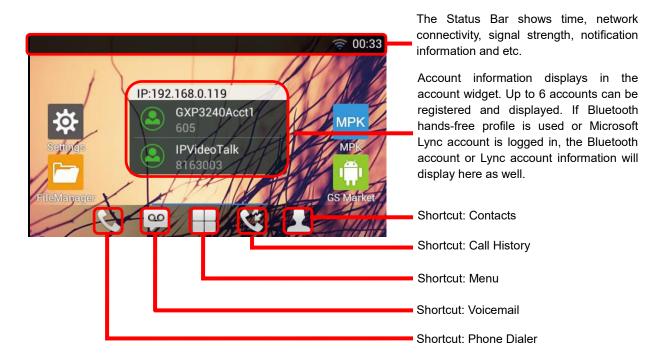


Figure 4: GXV3240 Default Home Screen

Tap on the onscreen Menu icon , the settings and applications menu will be brought up as shown below.





Figure 5: GXV3240 Onscreen Menu

To fully manipulate the GXV3240 capacitive touch screen, use your fingers to operate the following on the GXV3240 icons, buttons, menu items, onscreen keyboard and etc.

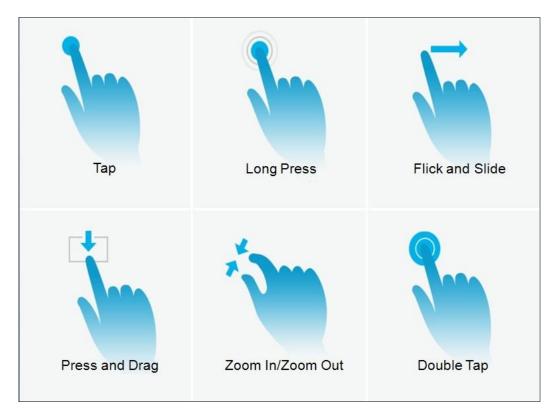


Figure 6: GXV3240 Finger Gestures on the Touch Screen



#### Tap

Slightly touch the screen with fingertip to initiate menu, options or applications. For example, to select items on the screen (e.g., setting options, apps and etc); to press onscreen buttons (e.g., "End" or "Options" softkey during the call); to type letters and symbols using the onscreen keyboard.

#### Long Press

Touch the screen with fingertip and press for about 2 seconds without lifting your finger from the screen till an action occurs. For example, long press on a picture to bring up selection option.

#### Flick and Slide

Touch the screen with fingertip and slide over the screen. For example, user could slide up to scroll up the page, slide down to open dropdown menu, slide left or slide right to delete an item from the list. If your finger stays on the screen for too long, the item may be selected and sliding won't occur.

#### Press and Drag

Touch and press the item, then move it by dragging it up, down, left or right, without lifting your finger from the screen.

#### Zoom In/Zoom Out

Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in).

#### Double Tap

Quickly touch the screen twice with fingertip to switch between default display and zoomed-in display. This is usually used when viewing photos or web pages.

#### **USE THE DESKTOP**

#### **DESKTOP MENU**

When the GXV3240 is on idle screen, press the MENU button to bring up phone's menu. Users can access to following in the desktop menu:



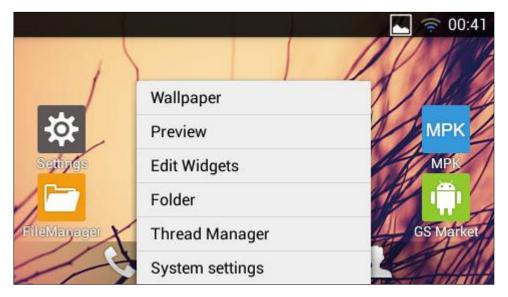


Figure 7: GXV3240 Desktop Menu

#### Wallpaper

Select wallpaper from Gallery, Wallpapers or Live Wallpapers.

#### Preview

Add, delete or edit desktop.

#### Edit Widget

Add widgets to the desktop by dragging the widget from the bottom menu to the desktop.

#### • Thread Manager

Manage running applications on the GXV3240. For more details, please refer to section [**MANAGE RUNNING APPLICATIONS**].

#### System settings

Access phone's settings such as "Personalized Account", "Wireless & Network", "Sound", "Display", "Storage", "Application" and etc.

#### ADD APPLICATION SHORTCUT TO DESKTOP

The shortcut of the applications installed on the GXV3240 can be added to the desktop for users' easy access. To add shortcut:

1. Tap on the screen Menu icon to access the applications first.



- 2. Select and press the application icon for about 2 seconds. The screen will show "Move to Desktop" on the bottom.
- 3. Drag the icon to the bottom of the screen. Phone's idle screen will immediately show up for you to place the shortcut.



Figure 8: Add Application Shortcut to the Desktop

#### ADD WIDGET TO DESKTOP

The GXV3240 provides widgets like account bar (with different number of accounts supported), clock, calendar, contacts, Email, MPK, system setting shortcut, weather and etc. Users could conveniently add those widget to the desktop as preferred. To add a widget:

- 1. Tap on the Menu button and select "Edit Widgets".
- 2. Different widgets will be displayed on the bottom of the screen.
- 3. Select and drag the widget to the desired spot to be placed on the desktop. Please make sure there is enough space on the desktop. Otherwise, the widget won't be added.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 31 of 161



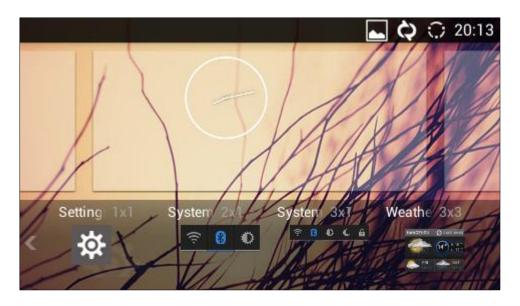


Figure 9: Add Widget to the Desktop

#### **MANAGE DESKTOP ITEMS**

On the GXV3240 desktop, users could tap on the desktop items to manage shortcuts and widgets. The following operations can be done:

• Tap on the shortcut icon to open the application.

For example, tap on "FileManager" icon to access file manager application.

Tap on the widget to open and edit it.

For example, tap on the analog clock on the desktop. The clock settings will be brought up for users to set up timer, stop watch or alarm.



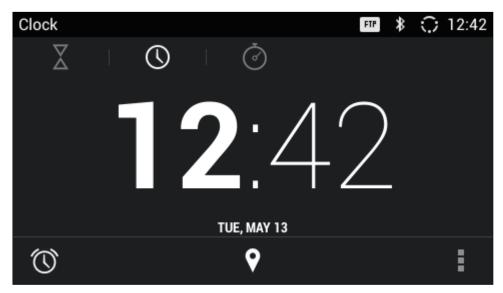


Figure 10: Open Clock Widget

Certain widgets such as Calendar, Clock and Bookmark can be resized on the desktop.
 To resize a widget, touch and press the widget for about 2 seconds. Then lift your finger from the screen. This will bring up the blue frame as shown in [Figure 11: Resize Digital Clock Widget]. Touch and drag the border of the frame to adjust the size.



Figure 11: Resize Digital Clock Widget

#### • Move the shortcut/widget

To move a shortcut/widget to a different spot on the desktop or to a different idle screen, touch and press the item for about 2 seconds until a recycle bin icon shows up on the bottom of the screen.



Drag the item up/down/left/right to the destination spot on the screen. Lift your finger once done.

#### Remove the shortcut/widget

To remove an item from the desktop, touch and press the item for about 2 seconds. A recycle bin icon will show up on the bottom of the screen. Drag the item to the recycle bin to remove it.



Figure 12: Remove Clock Widget from Desktop



Removing operation only removes the shortcut of the application on the screen. The application itself will not be uninstalled.

#### **SET WALLPAPERS**

On the GXV3240 desktop, touch and press on an empty spot for about 3 seconds to bring up wallpaper settings. Or users could press menu button and select "Wallpaper" to set up the wallpaper for the desktop.

Users could select wallpaper from different categories:



## Gallery

Open Gallery application and tap on the picture to preview. Touch and drag the blue frame border to select the area of the picture. Then tap on "OK" to set the selected area of the picture as wallpaper.

## Live Wallpapers

Open a list of sample animated wallpapers built-in with the GXV3240. Select the live wallpaper to preview and then tap on "Set wallpaper".

## Wallpapers

Open a list of sample wallpapers built-in with the GXV3240. Select the picture to preview and then tap on "Set wallpaper".



Figure 13: GXV3240 Choose Wallpaper

#### MANAGE RUNNING APPLICATIONS

On the GXV3240 desktop, press the Home button for about 2 seconds or select "Thread Manager" after pressing Menu button.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 35 of 161



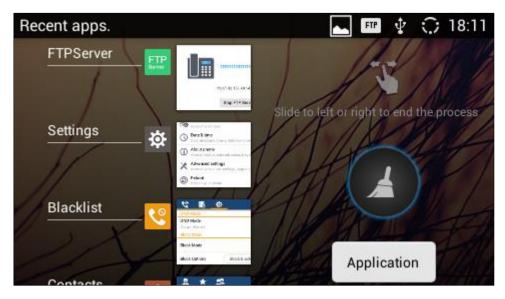


Figure 14: GXV3240 Recent Applications

Users could use the thread manager to do the following:

- Slide the running thread to the left or right to stop the application.
- Tap on icon to delete all running threads.
- Tap on "Application" softkey to access application menu for advanced management options.

## **IDLE SCREEN**

#### **SWITCH IDLE SCREENS**

The GXV3240 supports multiple idle screens by sliding the screen horizontally. On the GXV3240 screen, slightly touch an empty area and slide to the left or right using your finger to switch between different idle screens.

#### **SET UP IDLE SCREEN**

#### • Set home screen

Follow the steps below to set up the HOME screen.

- 1. GXV3240 is up and running on idle screen.
- 2. Press the MENU button and tap on "Preview" option. This will zoom out all the screens as



shown in [Figure 16: Delete Idle Screen].

3. The screen with displayed is the HOME screen. Others are shown with icon to select the corresponding screen as the new HOME screen.

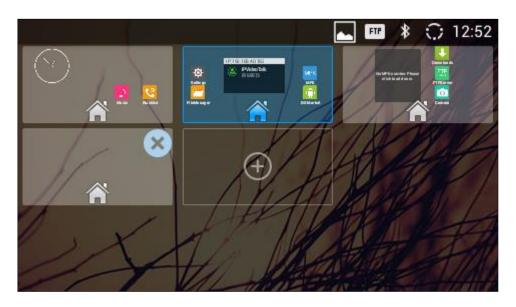


Figure 15: Set Up Home Idle Screen

#### • Add/Delete idle screen

As shown in *[Figure 15: Set Up Home Idle Screen]*, the screen with the blue frame highlighted is the current idle screen on the LCD. Users could add or delete idle screen.

- > Add idle screen.
  - Tap on to add a new idle screen. Users could add up to 9 idle screens.
- > Delete idle screen.
  - Tap Son the top right of the idle screen to delete the idle screen. Please make sure the apps, shortcuts or widgets on the idle screen are removed first. Otherwise, the idle screen.





Figure 16: Delete Idle Screen

## **USE THE STATUS BAR**

The status bar on the top of the GXV3240 screen provides visual notification for the system settings and status, as well as quick access for important system settings. To access it, on the GXV3240 idle screen, slowly slide down from the top to the bottom of the screen as the following figure shows.



Figure 17: GXV3240 Top Status Bar

The running process will show up in the list. For example, the following figures indicates Google Play app



is being downloaded at the moment.


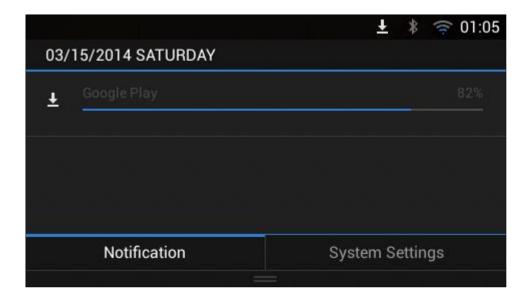


Figure 18: GXV3240 Top Status Bar - Notification

#### **NOTIFICATIONS IN STATUS BAR**

The following table describes the icons used on the status bar for notification purpose.

Table 5: GXV3240 Status Bar Notification Icons

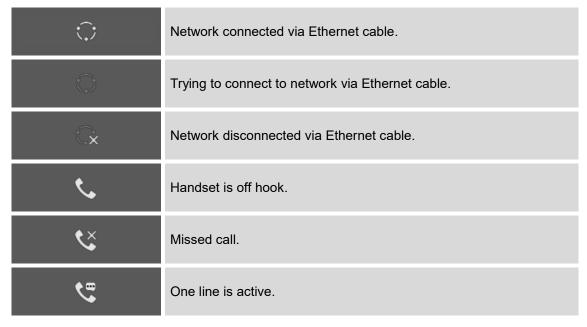



<b>\ </b> ))	Speaker is being used.
	RJ9 headset is being used.
(T)	RJ9 headset mode is on. All the calls will be using RJ9 headset by default.
	Wi-Fi is enabled and connected. Signal level: 1.
	Wi-Fi is enabled and connected. Signal level: 2.
(Co-	Wi-Fi is enabled and connected. Signal level: 3.
(G.	Wi-Fi is enabled and connected. Signal level: 4.
*	Bluetooth is enabled.
*	Bluetooth is enabled but not connected.
.0	Bluetooth headset is connected.
${}^{ au}\!$	Bluetooth headset is being used for calls.
<b>.</b>	Downloading files via Bluetooth.
$\bigcirc$	Alarm is set up and enabled.
<b>F</b> o	DND is enabled.
<b>½</b>	Mute is enabled.
<b>■</b> ×	Silent mode is enabled. When it's on, the incoming call/message won't produce ring tone/notification tone from phone's speaker.



	SD Card is inserted.
E	SD Card space full.
$\Psi$	USB flash drive is inserted.
<u>+</u>	Downloading files via Internet connection.
â	Updating applications.
7	Calendar has event scheduled.
<u> </u>	New voicemail to be retrieved.
×	Unread Email to be retrieved.
FTP	FTP server is running.
<b>C</b>	Incoming call from blacklist contact.
${\mathfrak L}$	Camera is disabled.
	Contact storage is full.
НОМІ	HDMI cable is connected to display device.
<b>©</b>	New message to be retrieved.
<b>R</b>	SMS Message sent failure.
₩҈	The phone is powered up using PoE.



<b>C</b> 1	Call forward is set up for SIP account 1.
<b>\t</b> 2	Call forward is set up for SIP account 2.
<b>\t</b> ;	Call forward is set up for SIP account 3.
<b>\tau_4</b>	Call forward is set up for SIP account 4.
<b>\tau_</b> 5	Call forward is set up for SIP account 5.
<b>₹</b> ₅	Call forward is set up for SIP account 6.
G	More notifications on the status bar.
4	USB mouse is connected.
<b>&gt;</b>	Music is playing using music app.
ē7	PPPoE is connected.
ĒX	PPPoE is not connected.
A	Warning message.

## **SYSTEM SETTINGS IN STATUS BAR**

Slide down the top status bar and select **System Settings**. Users will see the following settings.



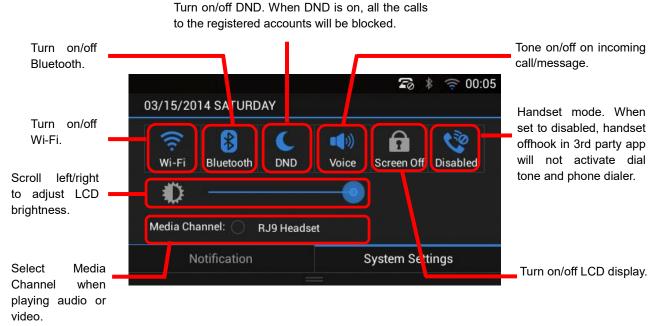


Figure 19: System Settings in Status Bar

## ⚠ Note:

**Handset Mode** is for audio path and GXV3240 dialer control when running 3rd party app that uses media path. Currently there are three options supported:

- **Enabled:** Default mode. When handset is lifted, audio will come through handset and the GXV3240 default dial screen will show.
- **Disabled:** In this mode, when running the 3rd party app, if handset is lifted, the audio path will switch to handset but GXV3240 default dial screen won't show (users won't hear dial tone either). Onhook the handset, the audio path will be switched to speaker. Under this mode, even the GXV3240 is not using the 3rd party app, picking up the handset will not activate the GXV3240 dialer. (Users can still use Speaker button to activate GXV3240 dialer under this mode.)
- Auto: In this mode, the GXV3240 will automatically detect if the audio path is used by 3rd party app
  first. If so, it will use the handset mode "Disabled". Otherwise, keep it in "Enabled" mode. Please note
  that running the 3rd party app doesn't necessarily mean the audio path is used by the 3rd party app. If
  the audio path is not occupied by the 3rd party app, the GXV3240 will still use the handset mode
  "Enabled".



## **USE THE KEYPAD**

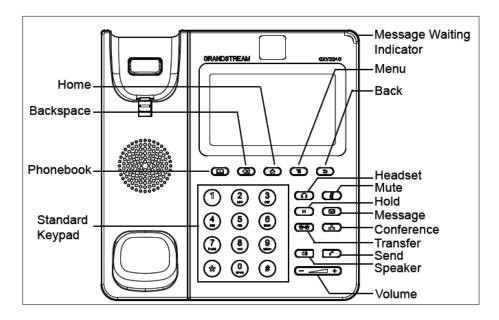


Figure 20: GXV3240 Keyboard

#### **KEYPAD BUTTONS**

Table 6: GXV3240 Keypad Buttons

	Contacts. Press to view and edit contact information.
	<b>Backspace</b> . Press for backspace when entering characters and numbers.
<b>(A)</b>	<b>Home</b> . Press to go back to <b>Home</b> screen; or press and hold it for about 2 seconds, the current running applications and <b>Manage Applications</b> button will show.
	Menu. Press to view options for different screen or applications.
C	Back. Press to go back.
n	Headset. Press to switch to headset mode.
( †	Mute. Press to mute or unmute the call.
	Hold. Press to put call on hold or resume the call.



	Message. Press to view voicemail messages.
2-2	Transfer. Press to transfer call.
A	Conference. Press to conference call.
<b>(1)</b>	Speaker.
	Send/Redial.
( <del> +</del> )	Volume.

#### **KEYPAD SHORTCUT FUNCTIONS**

The GXV3240 supports keypad shortcuts for certain special system functions.

#### Screenshot

Press the Menu button for about 3 seconds to capture screenshot. The screenshot can be accessed via **FileManager->Internal Storage->Pictures->Screenshots**. The screenshot picture size is 480x272 pixels.

#### • Firmware upgrade via SD card

Insert the SD card to the GXV3240. The SD card should have the valid firmware bin file in it. Power cycle the phone and the MWI LED will light up. Wait until the MWI LED lights off. Then immediately press both \* and # keys at the same time for about 8 seconds. Release the keys once the MWI LED lights up again. The phone will start the upgrading process.

#### **USE THE ONSCREEN KEYBOARD**

The GXV3240 onscreen keyboard can be activated by tapping on an input field.

#### English Keyboard

This is the default keyboard on GXV3240. Touch and press the key on the keyboard for about 2 seconds and it will switch to , which can be used to access input options to switch input methods.





Figure 21: GXV3240 Onscreen Keyboard - English Keyboard

To switch input between lowercase and uppercase, tap on (lowercase) or (uppercase).

## • Number and symbols

To input number and symbols, tap 2123 on the default keyboard to switch to number/symbols. Tap on

to switch back. Tap on to access more symbols.



Figure 22: English Keyboard - Number and Symbols



- To configure keyboard and input options, users could go to Settings->Language & Keyboard-> Keyboard & Input Methods.
- Users could touch and press the key on the keyboard for about 2 seconds to input the alternate character. For example, touch and press the "q" key for about 2 seconds can enter "1".

#### **USE THE MESSAGE WAITING INDICATOR**

The GXV3240 message waiting indicator LED is on the upper right corner of the device. It could notify the

Firmware Version 1.0.3.6 GXV3240 User Guide Page 46 of 161



users with different messages and status of the phone. Please refer to the status description below. **The priority for the LED indicator is from high to low in the following table**.

Table 7: GXV3240 MWI LED Status

Color	LED Status	Description
	Fast Flashing	Incoming call
	Solid	Calling, Talking, Conferencing, Screensaver on when the LCD is off
	Slow Flashing	Call on hold
	Flashing	Missed call (s), New voicemail (s), New SIP Message (s)
	Solid	High memory usage, Maximum contact storage
	Fast Flashing	Upgrading
OFF	OFF	Normal



This page intentionally left blank



## **MAKE PHONE CALLS**

#### **REGISTER SIP ACCOUNTS**

The GXV3240 supports up to 6 independent SIP accounts, including a pre-configured IPVideoTalk account registered on account 6. Users can make video calls and send messages to other IPVideoTalk accounts registered on another GXV32xx/GXV31xx. Each account can have separate SIP servers, usernames and NAT configurations.

#### **ACCOUNT STATUS**

On the idle screen, the account widget shows account name, number and registration status.

- The following figure shows the accounts are successfully registered (account icon is green).
- If the account icon is grey, it's still trying to register or unable to register.
- If the users have enabled Shared Call Appearance on the registered account, the account icon will be blue
- Microsoft Lync account and Bluetooth handsfree profile account will be displayed here too (if any).



Figure 23: GXV3240 Account Widget

#### **CONFIGURE SIP ACCOUNT**

To register SIP account, users could directly configure from phone's LCD menu->Settings->Advanced Settings->Account. Or users could log in the GXV3240 web GUI->Account page to fill in the necessary registration information, i.e., Account active, Account name, SIP Server, SIP User ID, SIP Auth ID, SIP Auth Password and etc. Once the correct information is entered and saved, the account registration



status will show on the main screen.



For web GUI login and configuration information, please refer to GXV3240 Administration Guide.

Once the account is successfully registered, users could use one of the following ways to bring up dial screen to start making calls.

- Take the handset off hook.
- Select an account from the account widget in the idle screen.
- On the bottom of the idle screen, tap on icon to open dial screen.
- Tap on to open "Phone" application which will bring up dial screen.
- Press the Speaker button to bring up dial screen and the audio channel will be speaker.

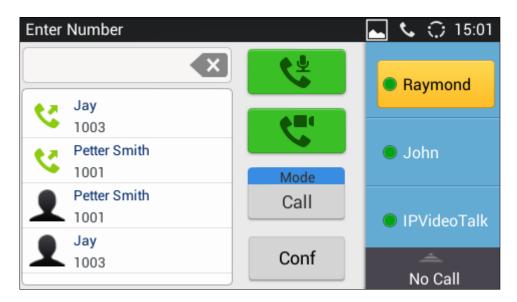


Figure 24: GXV3240 Dial Screen

#### SET PROGRAMMABLE KEYS ON UNREGISTERED ACCOUNT



GXV3240 allows end users to setup shortcut keys on the Phone app. The shortcut keys only allows to take place the unregistered accounts. From example, if the phone enables the Account 1 and register it with a SIP server, end users have to set the shortcut keys on Account 2 to 6.

From Web UI, users can set the shortcut keys under the setting of Account  $X \rightarrow Call$  Settings $\rightarrow$ Programmable keys. After setting, the programmable keys can be showed on the account bar in the phone app. The following screenshot is a speed dial key which takes place the Account 2 position. End user can tap the key to user Account 1 to dial the number 1001.

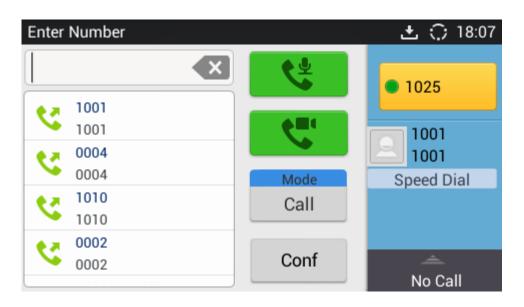


Figure 25: GXV3240 Programmable Keys

#### **DIAL A NUMBER DIRECTLY**

- 1. Use the methods mentioned above to open dial screen [Figure 24: GXV3240 Dial Screen].
- 2. Select the account to dial out on the right panel of the dial screen. The selected account will be highlighted in yellow background.
- 3. Enter the digits to be dialed out using the keypad. If the digit matches call history, a dropdown list of numbers will be displayed for users to select.
- 4. Tap on (audio call only) or (video call), or (audio call only) to send the number.

  If no key is pressed, the call will be automatically dialed out after 4 seconds timeout.

# **⚠** Note:

• By default, the "No Key Entry Timeout" is 4 seconds, meaning if no key is pressed after starting

Firmware Version 1.0.3.6 GXV3240 User Guide Page 51 of 161



- entering number, the call will be automatically sent out after the timeout. The timeout interval can be configured under web GUI->Account->Call Settings.
- GXV3240 allows users to press # key as SEND key. This behavior can be disabled via option "Use # as Dial Key" under web GUI->Account->Call Settings.
- When the user enters the digit on the dial screen, if there is digit matching call history, or contacts name/number, the drop-down list will show the numbers. For example, if "John" is saved in the contacts, entering 5 (JKL) 6 (MNO) 4 (GHI) 6 (MNO) will show call log with 5646 as the first four digits, as well as John's number. Users could then directly select one of them from the list, instead of entering all the digits.

#### **REDIAL**

Users can dial out the last dialed number if there is dialed call log, using the same SIP account making the call last time. There are two ways to redial the last dialed number.

- When the phone is idle or off hook, press SEND button to redial.
- When the phone is on hook, press SEND button or # button (# key is used as dial key).

#### **DIAL A NUMBER VIA CONTACT**

Follow the steps below to dial a number via Contact.

- 1. Access Contacts by tapping on icon on the bottom of the idle screen, or selecting phone's menu.
- 2. Navigate in the contacts entries by sliding up/down on the screen.
- 3. Tap on the dial icon for the contact




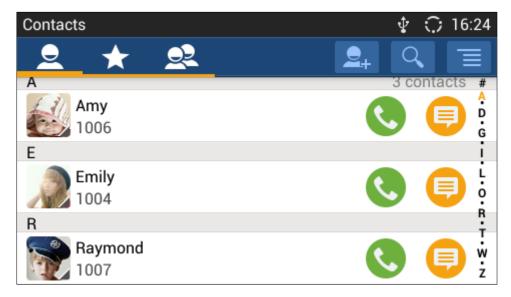


Figure 26 GXV3240 View Contacts

#### **DIAL A NUMBER VIA CALL HISTORY**

- 1. Access Call History by tapping on icon on the bottom of the idle screen, or selecting the phone Menu.
- 2. The LCD will display all call history types: "All", "Missed", "Outgoing" and "Incoming" calls.
- 3. Navigate in the call history list by selecting the call history category and sliding up/down on the screen.
- 4. Tap on the entry to dial out.



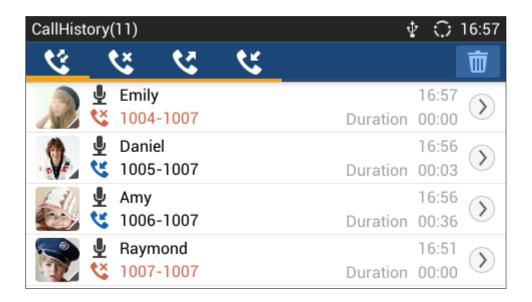

#### Figure 27 GXV3240 Call History

#### **DIRECT IP CALL**

Direct IP Call allows two phones to talk to each other in an ad-hoc fashion without a SIP proxy. VoIP calls can be made between two phones if:

- Both phones have public IP addresses;
   Or
- Both phones are on the same LAN/VPN using private or public IP addresses;
   Or
- Both phones can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

To make a direct IP call, please follow the steps below:

- 1. Off hook the phone or select account in the idle screen to bring up dial screen on GXV3240;
- 2. Under "Mode" button in the call screen, tap on it and select the mode as "IP Call";
- 3. Input the target IP address. For example, if the target IP address is 192.168.1.60 and the port is 5062 (i.e., 192.168.1.60:5062), input the following:

#### 192\*168\*1\*60#5062

The \* key represents the dot (.) and the # key represents the colon (:).

4. Press "SEND" key or tap on (audio call only) / (video call) button to dial out.



Figure 28 Direct IP Call



# **⚠** Note:

- The # will represent colon ":" in direct IP call rather than SEND key as in normal phone call;
- Port number is not mandatory when making direct IP call;
- Users need activate the first account on the GXV3240 to complete direct IP call;
- If you have a SIP server configured, direct IP call still works. If the devices are behind NAT, users
  might need configure NAT Traversal before using direct IP call. If you are using STUN, direct IP call
  will also use STUN;
- The phone needs to configure option "User Random Port" to "No" to accept direct IP calls;
- In GXV3240 Contacts, if the phone number is IP address, direct IP call can be made by dialing this
  contact.

#### **ANSWER A CALL**

#### **SINGLE INCOMING CALL**

 When the phone is in idle and there is an incoming audio call, the phone will show the call screen as below. Tap on "Answer" softkey to answer the call via speaker, or pick up the handset the answer the call.



Figure 29: Single Incoming Call - Audio

• When the phone is in idle and there is an incoming video call, the phone will show the call screen as



below. To answer the call with audio only, tap on "Audio Answer" to answer the call via speaker, or pick up the handset. To answer the call with both audio and video, tap on "Video Answer". During video call, the audio will switch to handset if picking up the handset.

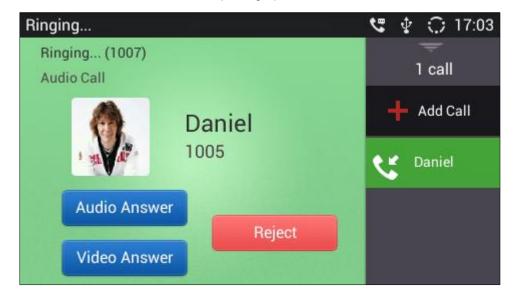


Figure 30: Single Incoming Call - Video

• If the phone set the "Preview" feature for the incoming call from Web UI, the phone will display one more key "Preview" when there is an incoming video call. End users will preview the remote end without answering the video call. After previewing, end user can tap "Answer" key to answer the video call or "Reject" key to reject it. This feature should be supported by the SIP server. Please contact service provider for more information.



Figure 31: Single Incoming Call - Preview-1



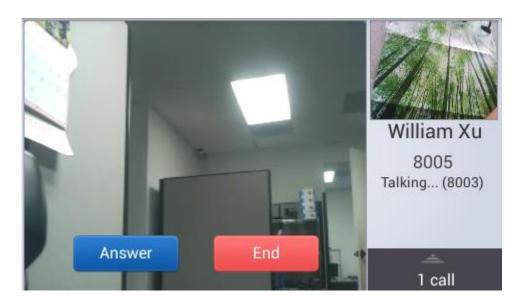


Figure 32: Single Incoming Call - Preview-2

## MULTIPLE CALLS/CALL WAITING

1. When there is another incoming call during active call, users will hear a call waiting tone, with the LCD displaying the caller name and ID for the incoming call. In the right panel, the account bar in green is the ringing line from "Ben"; the account bar in black is the current active call with "John". "3165" is the callee account name.

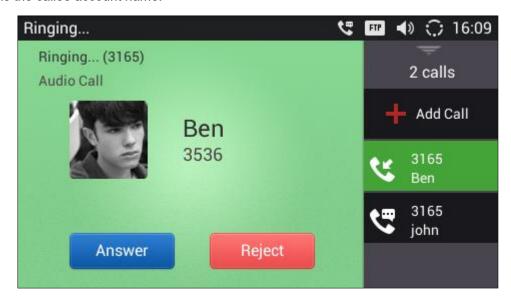


Figure 33: Call Waiting



- 2. Similar to single incoming call, if the incoming call is video call, users can choose "Audio Answer" or "Video Answer" to answer the call.
- 3. Once the new call is answered, the current active call will be placed on hold. If the new call is rejected by tapping on "Reject" softkey, the current active call will not be interrupted.

#### **CALL HOLD**

During the active call, press HOLD button to put the call on hold. The LCD screen will show as below. To resume the call, press HOLD button again.

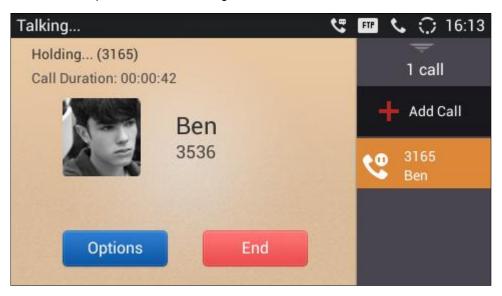


Figure 34: Call On Hold

#### **CALL RECORDING**

- 1. During the call, users could record the conversation to the phone by tapping on "Options"->"Start Recording" on the call screen.
- 2. Once done, tap on "Options"->"Stop Recording" or hang up the call.
- 3. The recording files can be retrieved from the GXV3240 application "Recorder"->"Call" category.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 58 of 161



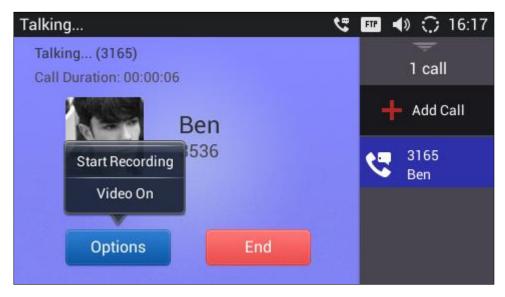


Figure 35: GXV3240 Call Recording

## **MUTE**

During an active call, press the Mute button to mute the call. The mute icon will be displayed in the status bar on the top of the screen. Press the Mute button again to unmute the call.

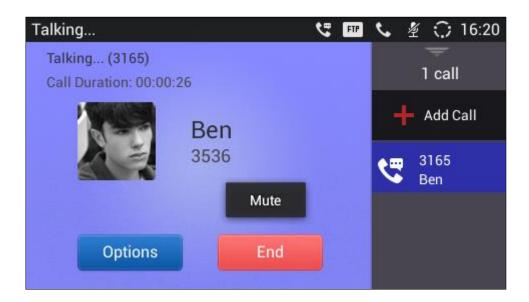


Figure 36: GXV3240 Call Mute



## TURN ON VIDEO DURING AUDIO CALL

Users could establish audio call first and then turn on video or accept video request during the call if the other party supports video call as well.

## • Turn on video during audio call

During an active audio call, on the call screen, tap on "Options" and select "Video On", a video request will be sent to the other party.

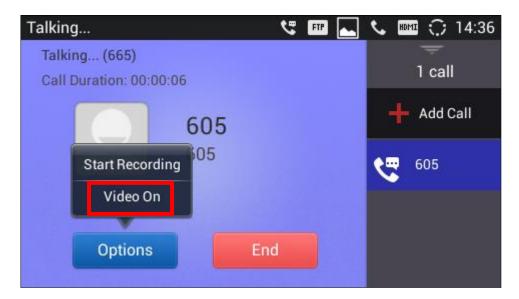


Figure 37: Turn on Video during Audio Call

Firmware Version 1.0.3.6 GXV3240 User Guide Page 60 of 161



## Accept video request

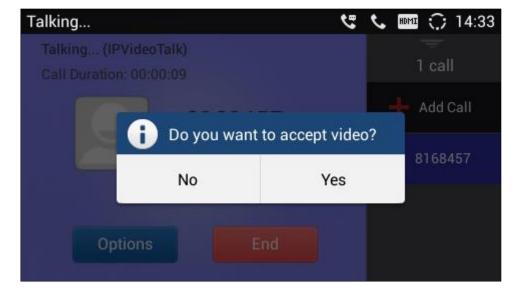


Figure 38: Accept Video during Audio Call

If the GXV3240 receives video request during the audio call, a message "Do you want to accept video?" will be prompted. Select "Yes" to establish video during the call.

### **SWITCH AUDIO CHANNEL DURING CALL**

- The GXV3240 allows users to switch among handset, speaker or headset (RJ9 headset, Plantronics EHS headset and Bluetooth headset) when making calls. Press the Hook Switch to switch to handset; press the Headset button to switch to headset; press the Speaker button to switch to switch to speaker; or slide down the "System Settings" menu on talk screen, and press icon to switch to Bluetooth headset.
- If Bluetooth headset is connected, the audio will be automatically switched to Bluetooth headset once the call is established.
- The status bar on the top or the screen shows the current audio channel being used during the call. If
  pressing the corresponding key for the currently used audio channel, the call will be hang up.



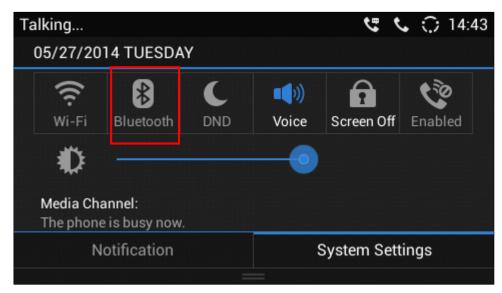


Figure 39: Switch Audio Channel during Call

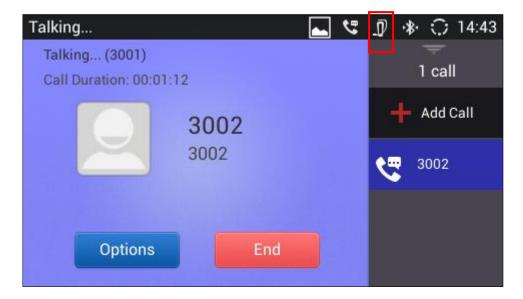


Figure 40: Switch Audio Channel during Call - Connected

## **CALL TRANSFER**

A call can be transferred to another party during the call. The GXV3240 supports blind transfer and attended transfer.

## **BLIND TRANSFER**

1. During the active call, press TRANSFER button to bring up the transfer screen;

Firmware Version 1.0.3.6 GXV3240 User Guide Page 62 of 161



- 2. Select transfer mode as "Blind" by tapping on the highlight button in the figure below. The default transfer mode is "Blind":
- 3. Enter the digits and then press the "Send" soft key on the right;
- 4. The call will be transferred and GXV3240 will hang up the call.



Figure 41: Blind Transfer



- If wrong digits are entered, tap on to delete the digit one by one;
- If users would like to cancel the transfer, press button to go back to the previous talking screen.

#### **AUTO-ATTENDED TRANSFER**

The GXV3240 support auto attended transfer which provides users a fast and easy way to complete attended transfer.

- 1. During the active call, press TRANSFER button to bring up the transfer screen;
- 2. Select transfer mode as "Attended" by tapping on the mode selection bar (see figure below);





Figure 42: Auto Attended Transfer

- 3. Enter the digits and then press the "Send" soft key on the right;
- 4. When the GXV3240 hears the ringback tone, the following screen will show. Users could tap on "Cancel" to cancel the transfer or simply hang up the call to complete call transfer before answer;

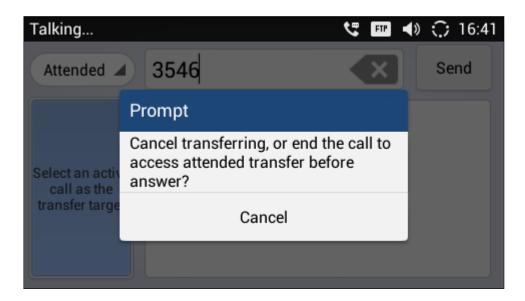


Figure 43: Auto Attended Transfer - Transferring

5. If the call is answered, users could then simply hang up or press the "Transfer" soft key to complete the transfer. Also, before hanging up, users can tap on "Split" in the following screen to separate the calls, talking to the second established call while placing the first call on hold.



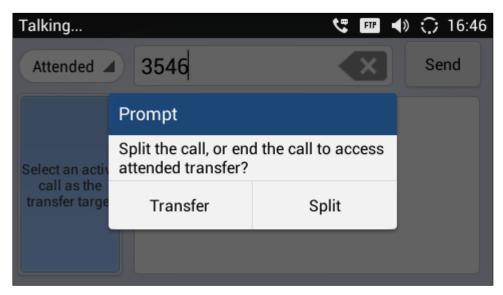


Figure 44: Auto Attended Transfer - Split

#### ATTENDED TRANSFER

Besides auto-attended transfer, users could also consult the third party first before transferring the call.

- 1. During the active call, tap on the right panel to make the second call. This will place the current call on hold;
- 2. The second call establishes after the call is answered;
- 3. Press TRANSFER button to bring up transfer screen. The first call on hold will be displayed
- 4. Select transfer mode as "Attended" in the transfer screen and tap on call:
- 5. The call will be transferred and GXV3240 will hang up the call.



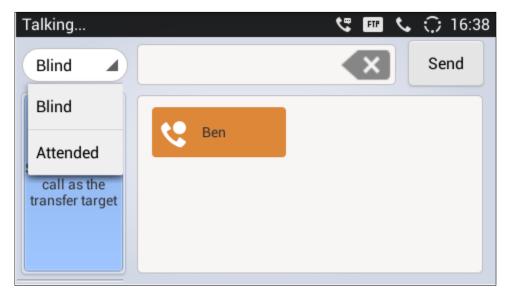


Figure 45: Attended Transfer



- To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains;
- If users would like to cancel the transfer, press button to go back to the previous talking screen.

#### **6-WAY CONFERENCE**

The GXV3240 supports up to 6-way conferencing on current firmware version 1.0.1.29.

#### **INITIATE CONFERENCE**

- 1. When the phone is in idle, call screen, or during an active call, press CONFERENCE button to bring up conference screen; users could also press CONF button in call screen right after off hook the phone;
- Tap on to start adding party in conference;





Figure 46: GXV3240 Conference Screen

3. Enter the number of the party and tap on "INVITE" to add it to the conference.



Figure 47: GXV3240 Conference - Add New Call to the Conference

If there is other call on the GXV3240, it will show up when adding member to the conference. Users could then tap on the call to add it to the conference.





Figure 48: GXV3240 Conference - Add Existing Call to Conference

4. Repeat the above step to add more parties in. The following figure shows a 4-way conference established.



Figure 49: 4-way Conference Call Established

#### REMOVE PARTY FROM CONFERENCE

To remove a party from the conference, tap on the right top corner for the corresponding party. This party will be disconnected from the conference.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 68 of 161



#### **END CONFERENCE**

To end the conference, tap on to disconnect all the parties from the conference. GXV3240 will hang up the call. If the remote party hangs up the call itself, it will be disconnected from the conference but other parties on GXV3240 will stay in the existed conference.

#### **HOLD AND RESUME CONFERENCE**

During the conference, users could press the HOLD button to hold or resume the conference at any time.

#### **AUTO CONFERENCE MODE**

The GXV3240 also supports "Auto Conference" which allows users to establish conference call in a quick and easy way, instead of adding the other parties one by one. To enable Auto Conference feature, go to web GUI->Advanced Settings->Call Features and set "Auto Conference" to "Yes". To esablish call with auto conference when there are 1 or more calls on the GXV3240, simply press the conference button

and all the calls on GXV3240 will be brought into the conference.

# ⚠ Note:

During the conference, if the initiator of the conference hangs up, the conference will end. If users wish to allow the remaining parties to stay in conversation after the initiator hangs up, the conference initiator should set "Transfer on 3-way Conference Hang up" to "Yes" in web GUI->Account page->Call Settings. This would allow the remaining parties to stay in the conference after the initiator exists the conference.

### **MISSED CALL**

When there is a missed call, the LCD will show missed call screen instead of regular idle screen.



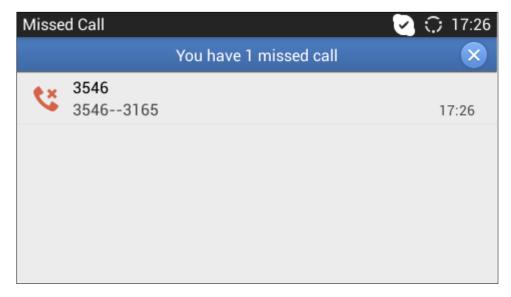


Figure 50: Missed Call Screen

Users can tap on the one of missed call entry to access the missed call log. To close the missed call screen and return to the idle screen, tap on the upper right.

## **DND (DO NOT DISTURB)**

When DND is on, the incoming calls to the GXV3240 will be blocked for all registered accounts with a reminder ring produced.

## To turn on/off DND:

- 1. Touch and drag the status bar down on the GXV3240 idle screen. Then tap on "System Settings".
- 2. Tap on the DND icon to turn it on. The status bar shows icon indicating DND is on.
- 3. Tap on the DND icon to turn if off.



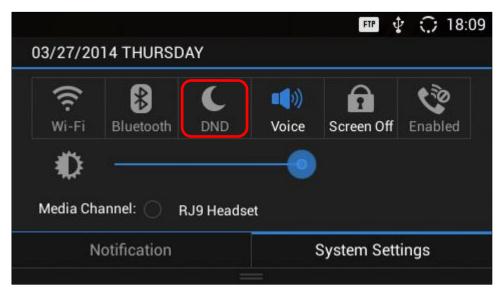


Figure 51: Enable/Disable DND

# **⚠** Note:

- When the phone is in an active call, turning on/off DND won't affect the current active call. It will take effect starting from the next incoming call.
- When the DND is on, all the incoming call logs will be saved in Blacklist. They won't be saved in Call History.

# **VOICEMAIL/MESSAGE WAITING INDICATION**

When there is a new voicemail, the Message Waiting Indication (MWI) LED icon will blink in red on the upper right corner of the GXV3240 and will show up in the status bar.

To retrieve the voicemail:

- 1. Press the Message button and voicemail screen will show up, with all the registered accounts and the number of voicemails displayed.
- 2. Tap on the account to dial into the voicemail box. Then follow the Interactive Voice Response (IVR)



for the message retrieval process.



Figure 52: Retrieve Voicemail

For each account, the Voicemail User ID can be set up under web GUI->Account X->General Settings: "Voice Mail UserID". This is the number that will be dialed out to access voicemail message when tapping on the account in Voice Mail screen.

# **CALL FORWARD**

Call forward feature can be set up from GXV3240 LCD or web GUI.

### From LCD

Go to onscreen Menu->Settings->Personalized Account->Select account name and tap on Call Forwarding to activate the feature. Then a list of options will show. Select the option to configure the call forward type (None, Unconditional, Time Based, Others) and then enter necessary number in the fields.

### From Web GUI

Log in GXV3240 web GUI and go to **Account** page->**Call Settings**. By default, Call Forward feature is set to "None". The Call Forward feature options are:

> Unconditional Forward: All the incoming calls will be forwarded to the number set up in "All To" field.





Figure 53: Call Forward - Unconditional

> **Time Based Forward:** All the incoming calls will be forwarded to the number as schedule in the time period. During the setup time, the call will be forwarded to the number in "In Time Forward To:" field. Other period the call will be forwarded to the number in "Out Time Forward To:" field.

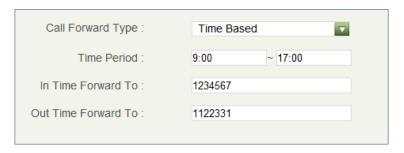


Figure 54: Call Forward - Time Based

➤ Call Forward on Busy / Call Forward No Answer: The incoming call will be forwarded when the GXV3240 is busy or no answer after certain interval "Delayed Call Forward Wait Time (s)".



Figure 55: Call Forward - Busy/No Answer

### **MULTI-PURPOSE KEYS**

The GXV3240 supports multi-purpose keys (MPK) without extension board (GXP2200EXT) by downloading MPK app from GS Market. After downloading the MPK app, users could configure the MPK

from MPK settings via LCD Menu->MPK app MPK, or via web GUI->Advanced Settings->MPK LCD



# Settings.

To configure MPK via MPK app on the GXV3240:

- 1. Download MPK app from GS Market and install it to the GXV3240.
- 2. Open the MPK app. Tap on the upper right of the app and then tap on the start adding MPK numbers.

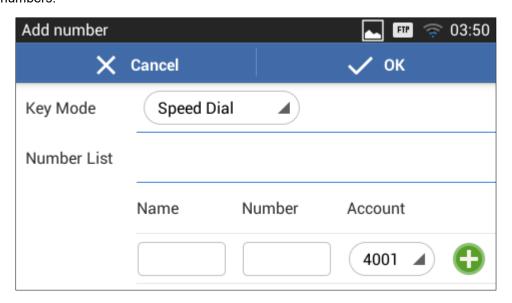


Figure 56: GXV3240 MPK APP - Add Number

3. For the number list, users could manually enter it or select number from Contacts to add it.

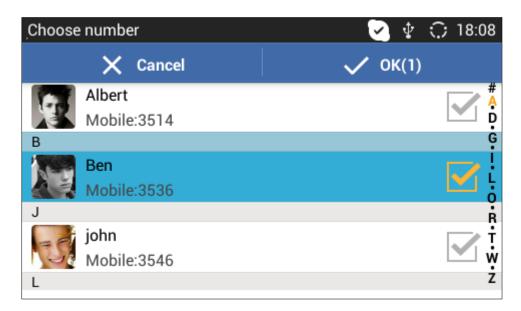


Figure 57: GXV3240 MPK APP - Add Number from Contacts



4. The added number will show in the list as the figure shows below.

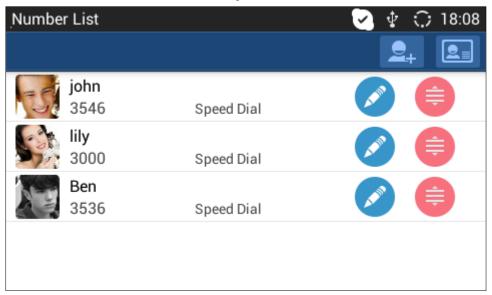


Figure 58: GXV3240 MPK APP - Number List

# **SHARED CALL APPEARANCE (SCA)**

The GXV3240 supports shared call appearance by Broadsoft standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.

All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the yellow-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on the phone. In addition, they would need to enable SCA and configure SCA options via LCD or web GUI.



To configure SCA via LCD, go to **Settings->Personalized Account** and select one account first. The tap on "Shared Call Appearance (SCA)" to turn it on.

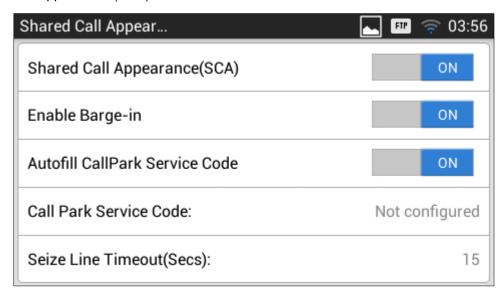


Figure 59: GXV3240 SCA Settings on LCD

To configure SCA via web GUI, go to **Account** page->**SIP Settings** to fill out the options in the following figure.

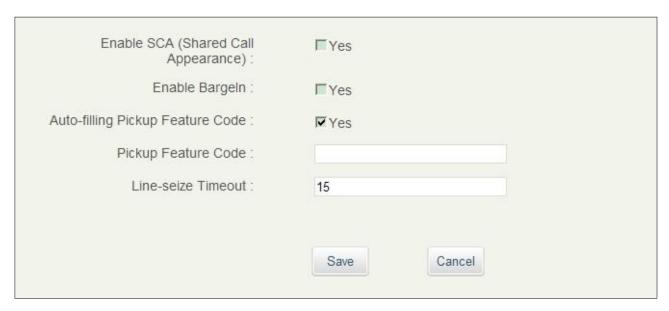


Figure 60: GXV3240 SCA Settings on Web UI

For more information about SCA configuration and function, please refer to the link below: http://www.grandstream.com/products/gxp\_series/general/documents/gs\_sca\_guide.pdf



# **CALL FEATURES**

The GXV3240 supports traditional and advanced telephony features including caller ID, caller ID with caller Name, call waiting, call forward and etc. Before using the following feature code, please make sure "Enable Call Features" option is set to "Yes" under web GUI->Account page->Call Settings.

Table 8: GXV3240 Feature Code

*01	<ul> <li>Use Preferred Codec (per call)</li> <li>Dial *01 followed by the preferred codec code and the phone number.</li> <li>The phone will try to use this codec during the call.</li> <li>Codec code:     PCMU: 7110     PCMA: 7111     G726-32: 72632     G722: 722     iLBC: 7201</li> </ul>
	For example, if the user would like to use PCMA as the preferred codec to call phone number 334455, enter *017111334455.
*02	<ul> <li>Force Codec (per call)</li> <li>Dial *02 followed by the preferred codec code and the phone number.</li> <li>The phone will be forced to use this codec during the call.</li> <li>Codec code:     PCMU: 7110     PCMA: 7111     G726-32: 72632     G722: 722     iLBC: 7201</li> <li>For example, if the user would like to use PCMA to call phone number 334455, enter *017111334455.</li> </ul>
*16	Force enable SRTP  • Dial *16.
*17	Disable SRTP  • Dial *17.
*18	Enable SRTP (per call)  ■ Dial *18.



	illiotation voice a vide
*19	Disable SRTP (per call)  ■ Dial *19.
*30	Block Caller ID (for all subsequent calls)  ■ Dial *30.
*31	Send Caller ID (for all subsequent calls)  • Dial *31.
*50	Enable Call Waiting  ■ Dial *50.
*51	Disable Call Waiting  ■ Dial *51.
*67	Block Caller ID (per call)  Dial *67 followed by the phone number.
*82	Send Caller ID (per call)  • Dial *82 followed by the phone number.
*70	Disable Call Waiting (per Call)  ■ Dial *70 followed by the phone number.
*71	<ul> <li>Enable Call Waiting (per Call)</li> <li>Dial *71 followed by the phone number.</li> </ul>
*72	<ul> <li>Unconditional Call Forward. To set up unconditional call forward:</li> <li>Dial *72 followed by the phone number to forward the call.</li> </ul>
*73	<ul> <li>Cancel Unconditional Call Forward. To cancel the unconditional call forward:</li> <li>Dial *73.</li> </ul>
*74	Paging Call  ■ Dial *74 followed by the phone number to send the paging call.
*83	Force Audio Calling (per call)  • Dial *83 followed by the phone number to send the audio call.
*84	Force Video Calling (per call)  • Dial *84 followed by the phone number to send the video call.
*90	<ul> <li>Busy Call Forward. To set up busy call forward:</li> <li>Dial *90 followed by the phone number to forward the call.</li> </ul>
*91	Cancel Busy Call Forward. To cancel the busy call forward:  • Dial *91.



*92	<ul> <li>Delayed Call Forward. To set up delayed call forward:</li> <li>Dial *92 followed by the number to forward the call. The default timeout before the call is forwarded is 20 seconds.</li> </ul>
*93	<ul> <li>Cancel Delayed Call Forward. To cancel the delayed call forward:</li> <li>Dial *93.</li> </ul>

Firmware Version 1.0.3.6 GXV3240 User Guide Page 79 of 161



This page intentionally left blank



# **CONTACTS**

The GXV3240 supports up to 1000 entries in the contacts. Users can manage contacts by adding, deleting and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage and exporting contacts to external storage.

There are three ways to access GXV3240 contacts:

- On the keypad, press button.
- On the phone's idle screen or menu, open Contacts app by tapping on icon
- On the phone's idle screen or menu screen, tap on icon on the bottom of the screen.

The following figure shows main page of Contacts on the GXV3240.

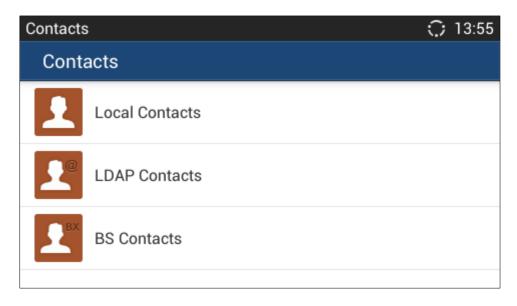


Figure 61: GXV3240 Main Page of Contacts

Tap the icon to access the main page of Contacts. The LDAP Contacts includes the contacts in specific LDAP server, and BS Contacts includes the BroadWorks Xsi Contacts. They need to be configured with the remote LDAP server or BroadWorks server to enable these features.



## **LOCAL CONTACTS**

The local contacts can save up to 1000 entries. Users can manage contacts by adding, deleting and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage and exporting contacts to external storage.

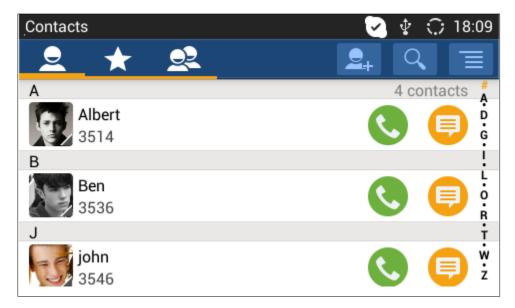


Figure 62: GXV3240 Local Contacts

On the upper left of the Contacts screen, users can tap on the icon to access three different categories in the contacts:

- All contacts.
- Favorite Contacts
- Rroups

### **ADD SINGLE CONTACTS**

- 1. Tap on to access all contacts.
- 2. Tap on to bring up "New Contact" dialog to manually add a new contact. See [Figure 63: GXV3240 Contacts Add New Contact].
- 3. Enter First name, Last name, Phone number and other information for the new contacts. Please



make sure the account number field is selected so the GXV3240 will use this account to dial out the new contact. The account number field is located on the left of the "Phone" filed as highlighted below.

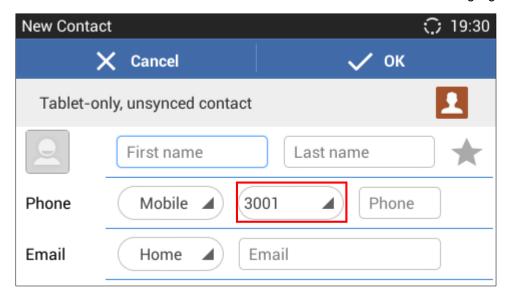


Figure 63: GXV3240 Contacts - Add New Contact

### **IMPORT/EXPORT CONTACTS**

If the users have the GXV3240 phonebook file saved in local storage or external storage device that has been plugged into the GXV3240, the phonebook file can be directly imported to the Contacts. There are three different formats supported for the phonebook file: "csv", "vcard", and "xml". Users could manually create contacts first and export the phonebook file in csv, vcard or xml format to take a look on the phonebook file.

# To import contacts:

- 1. Open Contacts.
- 2. Tap on the upper right of the Contacts screen.
- 3. Select "Import" to bring up "Import Contacts" dialog.



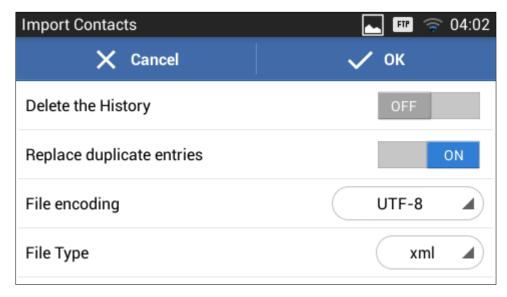


Figure 64: GXV3240 Contacts - Import Contacts

- 4. Fill in the import options and scroll down to the bottom of the screen.
- 5. Tap on "Select the file" to import phonebook file from the directory in internal or external storage device.

## To export contacts:

- 1. Open Contacts.
- 2. Tap on the upper right of the Contacts screen.
- 3. Select "Export" to bring up "Export Contacts" dialog.

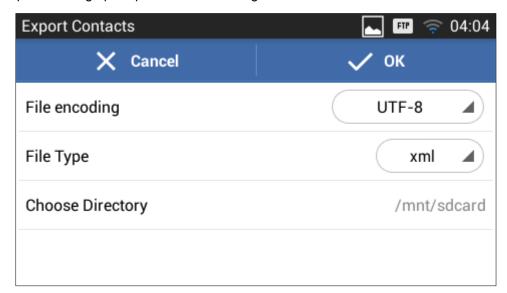


Figure 65: GXV3240 Contacts - Export Contacts



- 4. Select the file encoding and file type for the exported phonebook file. By default, the GXV3240 is using "UTF-8" as the encoding method.
- 5. Tap on "Choose Directory" and select the directory where the phonebook file will be exported to.

### **DOWNLOAD CONTACTS**

The GXV3240 supports downloading XML phonebook from a remote HTTP/TFTP server to local Contacts. When downloading the phonebook, the GXV3240 sends request to the HTTP/TFTP server looking for file **phonebook.xml**. For more details about GXV3240 phonebook, please refer to the following link:

http://www.grandstream.com/products/gxv\_series/gxv3240/documents/gxv3240\_xml\_phonebook\_guide.p

## To download phonebook:

- 1. Make sure the GXV3240 can connect to the HTTP/TFTP server and the phonebook.xml file in correct format is downloadable from the HTTP/TFTP server.
- 2. Open Contacts.
- 3. Tap on the upper right of the Contacts screen.
- 4. Select "Download" to bring up the "Download Contacts" dialog.

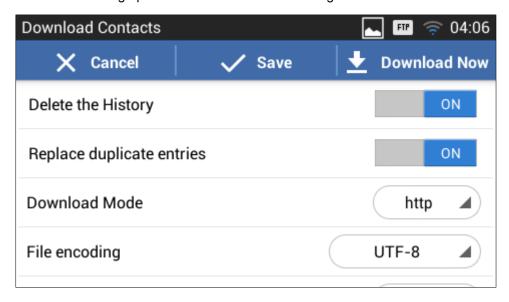


Figure 66: GXV3240 Contacts - Download Contacts

5. Fill in the necessary options and then tap on "Download Now". The GXV3240 will send out request to the configured HTTP/TFTP server.



### **SEARCH CONTACTS**

- 1. Open Contacts.
- 2. Select or to open the contact list where you would like to search.
- 3. Tap on the upper right to bring up search dialog.
- 4. Enter contact's name or number to search. The search result will be automatically updated and displayed when entering the key words.

### **USE CONTACTS**

Once the contacts are added, users could navigate in the contacts list to make a call, send message and manage the contacts further more.

### MAKE A CALL TO CONTACTS

Scroll up/down to find the contact in the list and tap on to call this contact.

### SEND SMS MESSAGE TO CONTACTS

Scroll up/down to find the contact in the list and tap on to call this contact.

### **SELECT CONTACTS**

- 1. Scroll up/down to find the contact in the list.
- 2. Touching and pressing on the contact for about 2 seconds until the checkbox shows up.
- 3. Tap on the checkbox for the contacts to be selected. indicates the contact is selected.



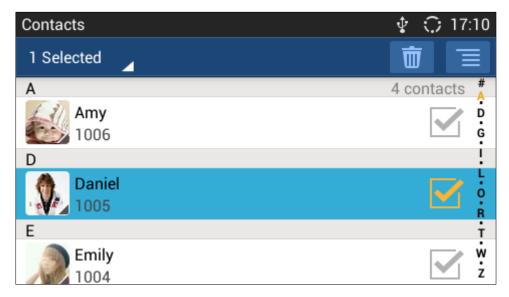


Figure 67: GXV3240 Contacts - Select Contacts

### ADD CONTACTS TO FAVORITES

- 1. Select the contact to be added as described in [SELECT CONTACTS].
- 2. Tap on and select "Add to favourites".

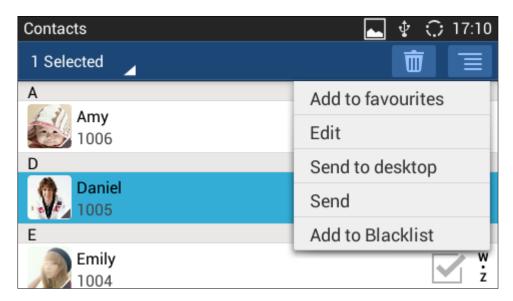


Figure 68: GXV3240 Contacts - Contacts Options

There are another 2 methods to add contacts to favorites.



- When adding or editing single contact, tap on to add the contact to favorite.
- Tap on to navigate to favorite category. Then tap on to select the contacts to be added to favorites.

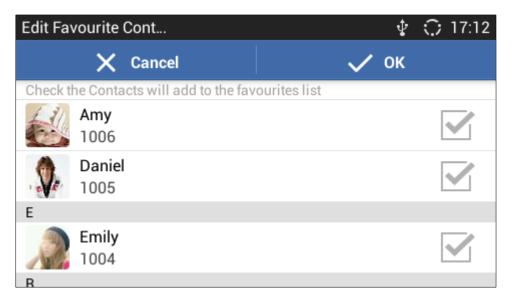


Figure 69: Add Contacts to Favorites

# **EDIT CONTACTS**

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on to edit the contacts.

# SEND CONTACTS TO DESKTOP SHORTCUT

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Send to desktop". A shortcut for this contact will be created on the idle screen for the users to access.

## SHARE CONTACTS VIA BLUETOOTH



- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Send". Users will be able to send this contact to the connected Bluetooth device with the GXV3240.

### ADD CONTACTS TO BLACKLIST

- 1. Select the contact as described in [SELECT CONTACTS].
- 2. Tap on and select "Add to Blacklist".

### **ADD GROUP**

Open Contacts and tap on to access group. To add a new group, tap on and select the existing contacts to the group.

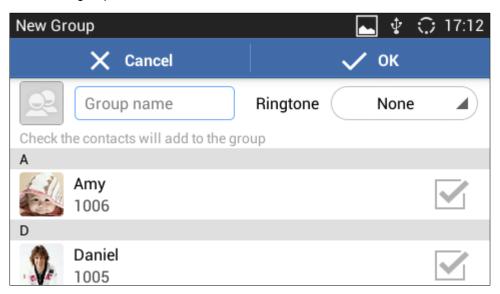


Figure 70: GXV3240 Contacts - Add New Group

# **⚠** Note:

- Users could also select group for the contact when adding or editing the contact.
- Ringtone can be assigned in group as well as single contact. If the group has ringtone set to "Custom"



# **CONTACTS STORAGE STATUS**

The GXV3240 contacts support up to 1000 entries. To check contact storage status, tap on up contacts options and select "Storage Status".

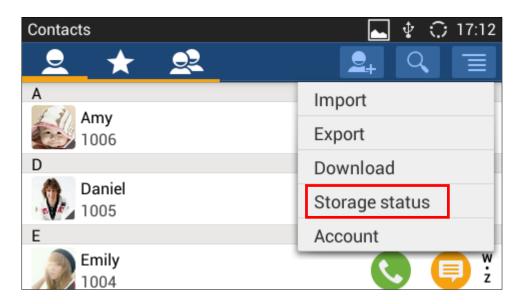


Figure 71: GXV3240 Contacts - Contact Options



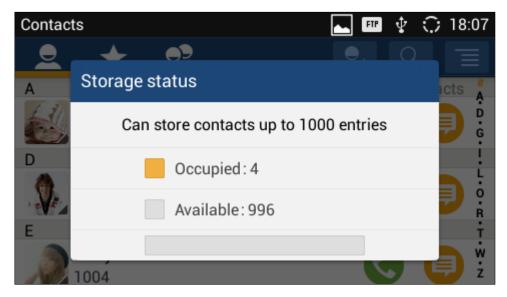


Figure 72: GXV3240 Contacts - Storage Status

# ADD ACCOUNT TO SYNC UP CONTACTS

On the GXV3240, users could add 3rd party application account (e.g., Gmail, Microsoft Lync, Skype, and etc.) so that the contacts there could be added to the GXV3240.

To add 3rd party application account:

- 1. Make sure the 3rd party application is installed successfully. For example, install Skype from GS market if you would like to add Skype account's contacts to the GXV3240.
- 2. Open contacts.
- 3. Tap on to bring up contacts options and select "Account".



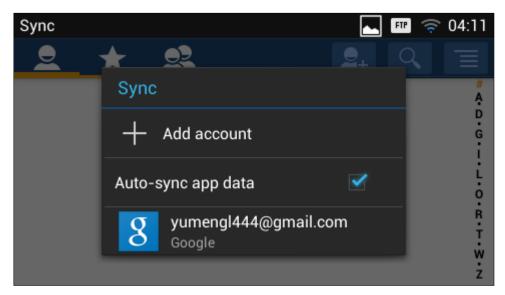


Figure 73: GXV3240 Contacts Options- Account

- 4. An installation wizard will guide the user to set up the account to sync the contacts step by step. Tap on "Add account" if there is no logged-in account set up on the GXV3240 yet.
- 5. The following figures describe adding a Google account for sync-up purpose. Tap on "Google" to add a Google account.

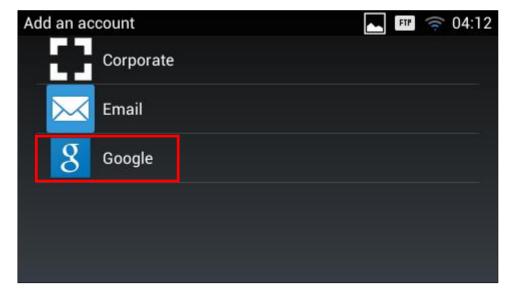


Figure 74: Add Account to Sync up in Contact

6. Follow the wizard and select "Existing" or "New" for the Google account.



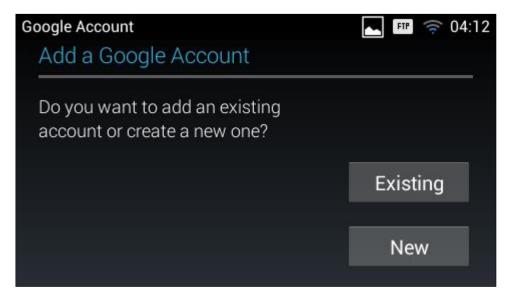


Figure 75: Add Google Account to Sync up in Contact

If users select "Existing", sign in with the Email address and password to complete the setup.

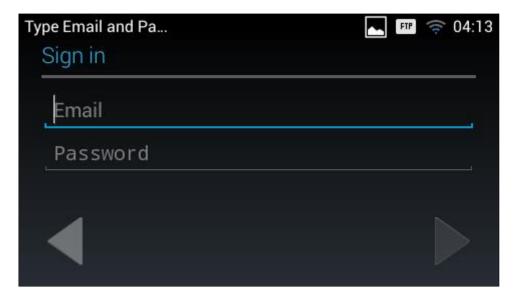


Figure 76: Sign in Google Account

# **LDAP BOOK**

In addition to local contacts, the GXV3240 also supports LDAP book if LDAP server is available within the network. Please refer to the following link for more details about how to use LDAP book on the GXV3240:



http://www.grandstream.com/products/gxv\_series/gxv3240/documents/gxv3240\_ldap\_book\_guide.pdf

# **BOADRWORKS XSI CONTACTS**

Besides the Local and LDAP phonebook, the GXV3240 also supports BroadWorks Xsi contacts if BroadWorks XSP server is available within the network. Please refer to the following link for more details about how to use BroadWorks Xsi Contacts on the GXV3240:

http://www.grandstream.com/products/gxv\_series/general/documents/gxv32xx\_broadworks\_xsi\_guide.pdf



# **BLACKLIST**

The GXV3240 has blacklist support for users to manage incoming calls. To access blacklist, tap on icon



on the phone's menu.

## **BLOCK HISTORY**

Open blacklist and tap on to view the block history. It shows the detailed information for the blocked calls: caller number, caller name and calling time.

### **RESTORE BLOCKED NUMBER**

The blocked number in the block history can be restored to call history and the number will be removed from blacklist. To do this:

- 1. In the block history, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and indicates the entry is selected.
- Tap on and select "Restore to Call History".

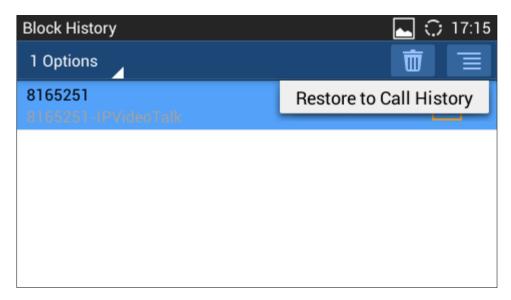


Figure 77: Restore Blocked Number



4. A dialog will pop up for users to confirm. Tap on OK to restore this number to call history and the number will be removed from blacklist.

## **DELETE BLOCK HISTORY**

- 1. In the block history, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and indicates the entry is selected.
- 3. Tap on to delete the selected entries.

Users could also tap on directly to clear all block history logs.

## **EDIT BLACKLIST**

Tap on and users will see all the blacklist numbers.

### **ADD BLACKLIST**

1. Tap on to start adding new entry to the blacklist. The blacklist can be added manually, add from contacts, or added from call history.

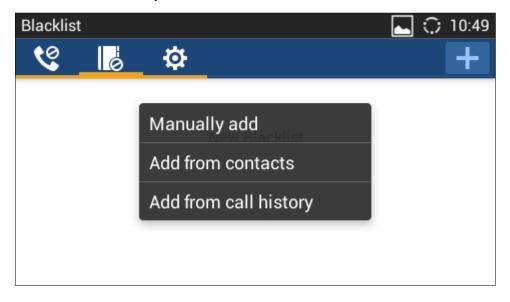


Figure 78: GXV3240 Blacklist - Add Blacklist

2. The following figure shows manually adding number to blacklist. Once Manually add option is

Firmware Version 1.0.3.6 GXV3240 User Guide Page 96 of 161



selected, a window will be prompted for users to enter the phone number in the first field and name/other note information in the second field (optional). Tap on **Save** to finish the adding operation.

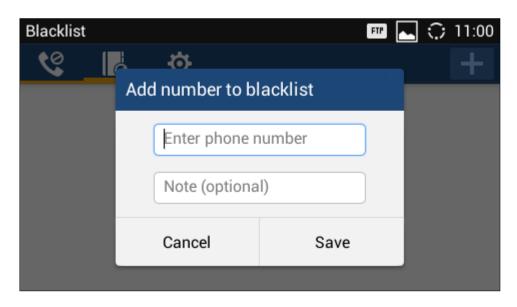


Figure 79: Manually Add Number to Blacklist

# **EDIT BLACKLIST**

- 1. In the blacklist, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on to edit the blacklist.
- 3. Tap on OK once done.



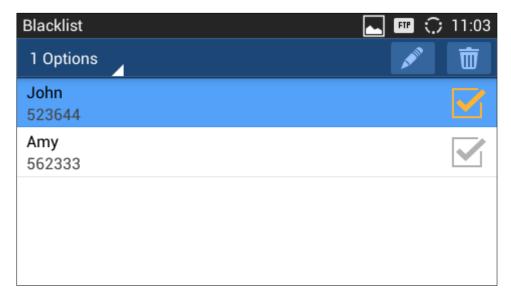


Figure 80: Edit Entry from Blacklist

### **DELETE BLACKLIST**

- 1. In the blacklist, touch and press the entry for about 2 seconds until checkbox displays.
- 2. Tap on the checkbox for the entries to be selected, and indicates the entry is selected.
- 3. Tap on to delete the selected entries.

# **BLACKLIST SETTINGS**

Tap on to access blacklist settings.

- DND Mode: Turn on/off DND mode. If turned on, all incoming calls will be rejected.
- **Block Mode**: Turn on/off Block Mode. If turned on, the **Block Options** will be activated so that the specific incoming calls will be blocked as defined in **Block Options**.
- Block Options: Select Block All, Block Blacklist Only, Block Anonymous or Block Anonymous
   And Blacklist. The option is valid only when Block Mode is on;
- Block Notification: Turn on/off Block Notification. If turned on, the block icon will be displayed in the status bar after the phone blocks incoming calls. Users could touch and drag the status bar and tap on the block notification to view details.



• Time Settings: Set up the block schedule. Select Block 24 Hours or Modify Time by specifying the Starting Time and Ending Time.

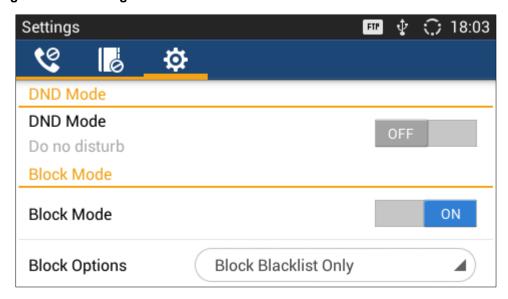


Figure 81: Blacklist Settings

Firmware Version 1.0.3.6 GXV3240 User Guide Page 99 of 161



This page intentionally left blank



# **CALL HISTORY**

GXV3240 Call history provides users access to phone's call logs in different categories. Call history can be accessed in the following two ways:

- Tap on phone's menu or idle screen if call history shortcut is created on the desktop.

  Or
- Tap on the bottom of the idle screen or menu screen.
- GXV3240 supports local and BroadWorks Xsi call history.

The following figure shows main page of Call History on the GXV3240.

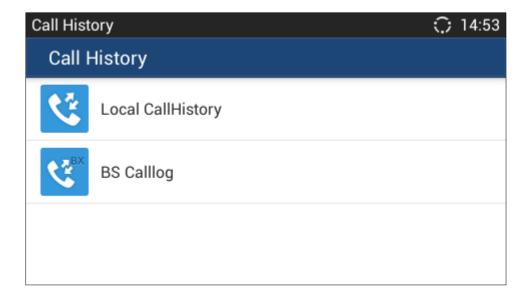


Figure 82: GXV3240 Main Page of Call History

# LOCAL CALL HISTORY



Firmware Version 1.0.3.6 GXV3240 User Guide Page 101 of 161



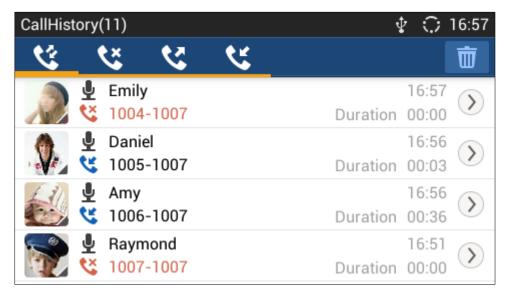


Figure 83: GXV3240 Call History

There are four different categories in the call history. Users could tap on the icon on the top menu to access the corresponding call logs:

- All calls
- Answered calls
- Dialed calls
- Missed calls

### **DIAL OUT FROM CALL HISTORY**

Tap on one of the call history entry to call this number directly. The phone will use the same account as the call log when dialing out.

### **CALL HISTORY OPTIONS**

- Touch and press the call history entry for about 2 seconds until the checkbox displays.
- Then tap on to bring up the options. Users can edit this number before calling, add this number to contacts, add this number to balcklist and send text message to this number.



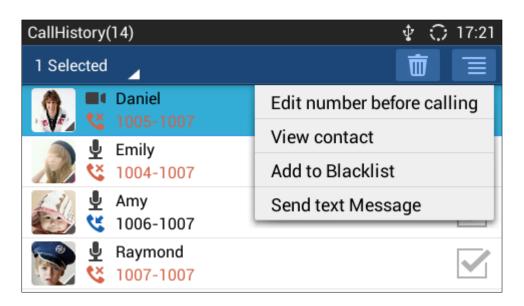


Figure 84: GXV3240 Call History - Options

### **DELETE CALL HISTORY**

- Touch and press the call history entry for about 2 seconds until the checkbox displays.
- Tap on the checkbox to select the call history entries, and indicates the entry is selected.
- Tap on to delete the entries.

## **CALL HISTORY DETAILS**

For each call history entry, users could tap on the right side of the entry to access the details.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 103 of 161



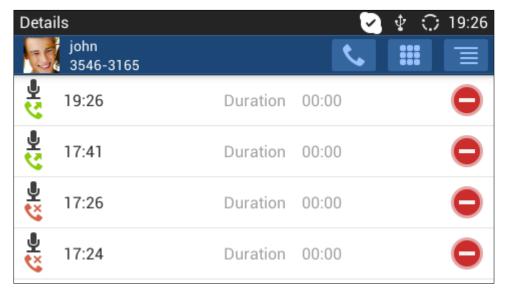


Figure 85: GXV3240 Call History - Details

The following operations could be done:

- Dial out this number directly.
- Bring up dial screen with the call history number. Users could edit the number before dialing out.
- Delete the entry.
- Options "Clear all", "Add to Contacts", "Add to Blacklist", or "Send Text Message" for the number in this entry.

### **BROADWORKS XSI CALL HISTORY**

Besides the Local Call History, the GXV3240 also supports BroadWorks Xsi call history if BroadWorks XSP server is available within the network. Please refer to the following link for more details about how to use BroadWorks Xsi Call History on the GXV3240:

http://www.grandstream.com/products/gxv series/gxv3240/documents/gxv32xx broadworks xsi guide.p df



# **SMS**

The GXV3240 has built-in SMS application to send/receive message, if the SIP server supports SMS message.

Users can create, edit draft, delete and check the storage status of SMS. The SMS app supports up to 1000 messages. Tap on the phone's menu or desktop to launch SMS application.



Figure 86: GXV3240 SMS Message

# **VIEW SMS**

On the SMS list screen, tap on one of the message to view the SMS details.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 105 of 161



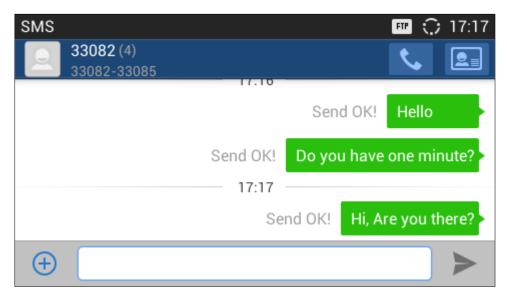


Figure 87: View SMS Dialog

# **CREATE NEW SMS**

Tap on in SMS application to start composing a new message.

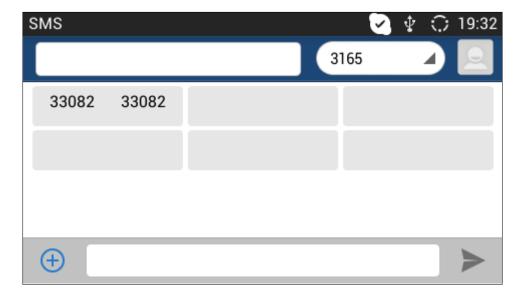


Figure 88: Create New Message

Select account to send the message from.
 Select the account to send the SMS message in the drop down box on the right side of the top menu.



2. Add number to send the message to.

Enter the number of the contact to send the message too on the left side of the top menu. Users could also select contact from GXV3240 Contacts by tapping on icon, select the account to send the SMS message in the drop down box on the right side of the top menu.

- Input content
   Enter the message content on the bottom field of the screen. Tap on "Done" once finished.
- 4. Send message

Tap on the arrow icon when you are ready to send the message out.

### **DELETE SMS**

- 1. Touch and press one SMS message for about 2 seconds until the checkbox shows.
- 2. Select the checkbox for the messages to be deleted. Users could also tap on select/unselect all message.
- 3. Tap on to delete the selected messages.



This page intentionally left blank



# **CALENDAR**

In Calendar application, users could synchronize events from Google account as well as create, modify and view the events. The GXV3240 also provides notification for the upcoming events from the Calendar.

Tap on to launch Calendar application.

# **SIGN IN CALENDAR**

When launching the Calendar application for the first time, the users will be required to sign in with a Google account.

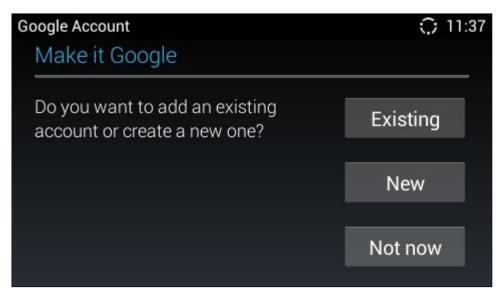


Figure 89: Sign In Calendar with Google Account

# **VIEW CALENDAR**

Once signed in, tap on the upper left softkey in the Calender application to select different format to view the calendar. Users can select "Day" "Week" "Month" or "Agenda" from there.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 109 of 161



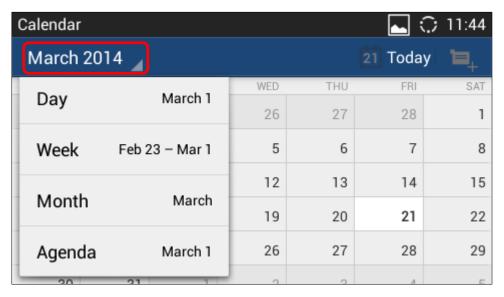


Figure 90: View Calendar

When viewing the calendar by month, the blue mark on the date indicates there is event scheduled on that day. Tapping on it can view the scheduled event.

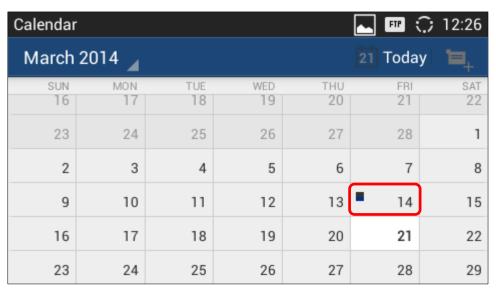


Figure 91: View Calendar by Month

Firmware Version 1.0.3.6 GXV3240 User Guide Page 110 of 161



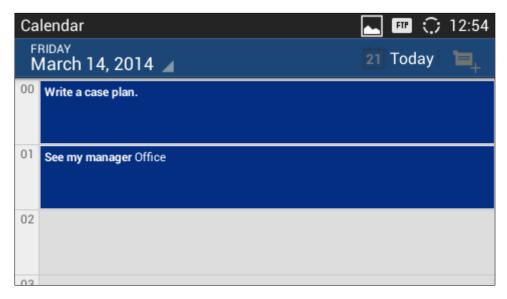


Figure 92: View Calendar by Day

#### **CREATE EVENT**

- 1. Tap on a date in the Calendar application to bring up the event list for that day.
- 2. On the upper right, tap on to create a new event.

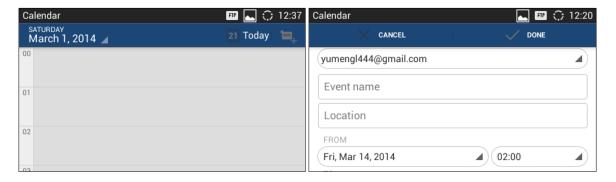


Figure 93: Create Event

# **CALENDAR OPTIONS**

In the Calendar application, press MENU button to bring up calendar options. Users could refresh calendar, search events and synchronize calendar with Google account by tapping on "Settings".



This page intentionally left blank



# **EMAIL**

GXV3240 provides built-in Email application for users to access personal or business Email account. Tap



### **SIGN IN EMAIL**

When launching the Email application for the first time, a wizard will be provided for users to set up the Email account step by step.

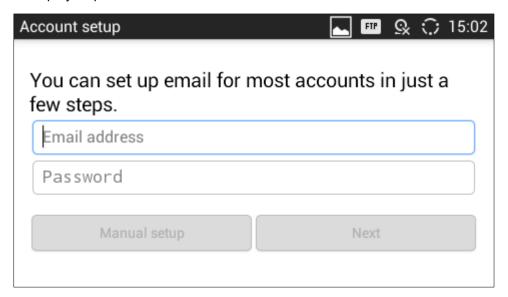


Figure 94: Sign In Email

- 1. Enter the Email address and Password.
- 2. Tap on "Next" for quick setup, or tap on "Manual setup" to manually configure more options.
- 3. If "Manual setup" is selected in step 2, users will need choose the account type "POP3" "IMAP" or "EXCHANGE" depending on the type of your Email account.



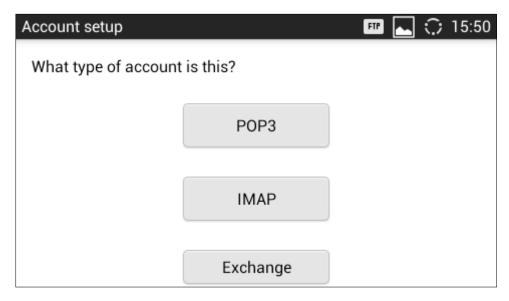


Figure 95: Select Email Account Type

POP3 setup. When using POP3, the sent Emails are stored locally instead of the server side.
 Please check with your network administrators for the correct Email account settings for POP3.

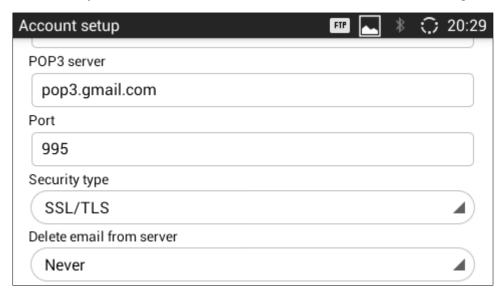


Figure 96: Email Account Type - POP3

 IMAP setup. When using IMAP, the Emails stay on the server side and users can see them from other devices as well. Please check with your network administrators for the correct Email account settings for POP3.



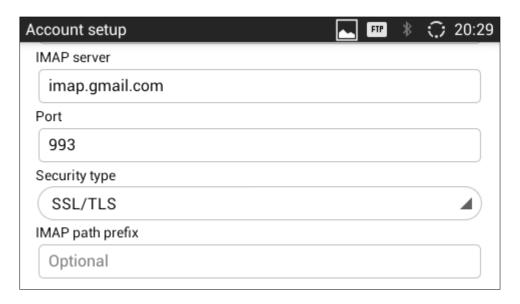


Figure 97: Email Account Type - IMAP

 EXCHANGE setup. When using EXCHANGE, all Emails are stored in the central Exchange mail server and can be checked using capable mail client such as Microsoft Outlook. Please check with your network administrators for the correct Email account settings for POP3.

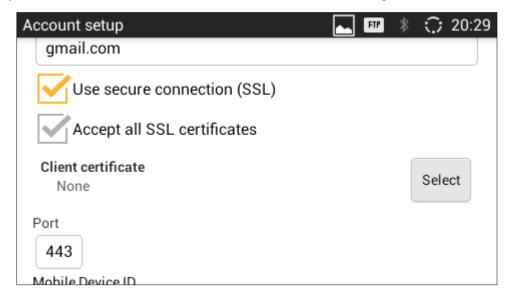


Figure 98: Email Account Type - EXCHANGE

4. If "Next" is selected in step 2, users will see the following default account settings. Tap on "Next" again.



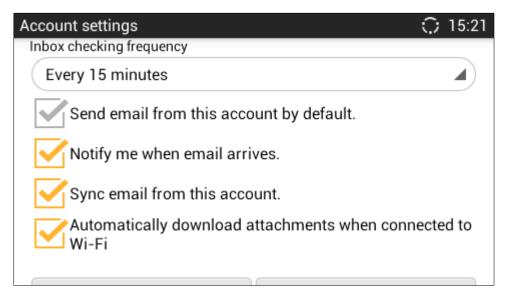


Figure 99: Email Account Settings

5. Set up "Your name" to be displayed on the outgoing messages and tap on "Next" again. Users should be able to start using the Email account now.

# **EMAIL OPTIONS**

#### **SEND EMAIL**

Tap on I to compose and send an Email.

### **SEARCH EMAIL**

Tap on to search Email.

#### **EMAIL FOLDERS**

Tap on to open up folders.

### **MULTIPLE EMAIL ACCOUNTS**

Users could also add more than one Email account on the GXV3240. To do this, go to phone's Settings->Accounts, tap on "Add account" and select "Email". A new Email account setup wizard will show up for

Firmware Version 1.0.3.6 GXV3240 User Guide Page 116 of 161



users to add the Email account.

Once another Email account is successfully added, users could tap on the account Email address on the upper left to switch between the Email accounts.

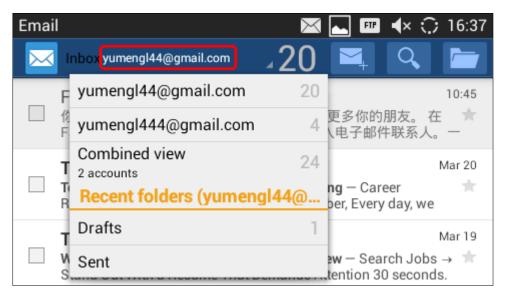


Figure 100: Multiple Email Accounts



This page intentionally left blank



# **GS MARKET**

The GXV3240 supports extensive amount of 3rd party Android applications. Users could install those applications from the built-in GS Market. If Google Play application is installed from GS market, users could log in and download all kinds of applications there as well.

Tap on the phone's menu or desktop to launch the GS Market. Users could browse, search, download and install the apps from there for tools, games and other applications.

### **VIEW APPS**

Open GS market and there are four different categories "HOT", "APP", "GAME" and "TOOLS". In the displayed applications, tap on one of the application and users will be able to see the details such as descriptions, publish date, version, rate, comments and etc.

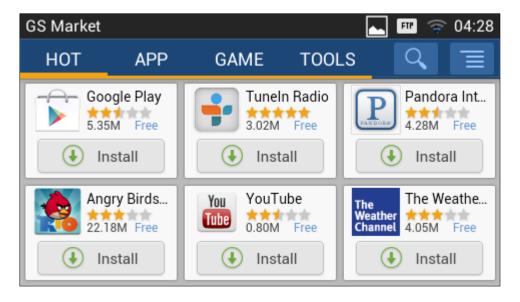


Figure 101: GXV3240 GS Market

### **SEARCH APPS**

Open GS market and tap on . Input the key words for the app you are looking for.



#### **DOWNLOAD AND INSTALL APPS**

- 1. Open GS market and find the app you would like to install.
- 2. Tap on "Install" softkey for the app. It will start downloading.
- 3. Once downloaded, the installation process will start automatically.
- 4. Tap on to view the downloaded apps and installed apps from GS market.

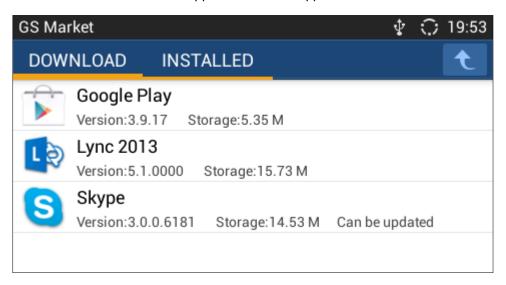


Figure 102: GXV3240 GS Market - Downloaded Applications

#### **UPDATE APPS**

The GXV3240 will automatically detect if there is a new version available for the installed apps to upgrade when the network connection is available and stable. Users can also view update status and manually update the apps in GS Market.

To update apps, open GS Market and tap on to access the installed apps. User will see Update option for the app that has new version available.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 120 of 161



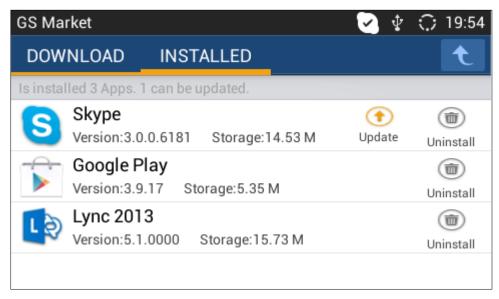


Figure 103: GXV3240 GS Market - Installed Applications

### **UNINSTALL APPS**

- 1. Open GS Market and tap on to access the installed apps.
- 2. User will see "Uninstall" option for each app. Tap on "Unstall" for the app you would like to unstall.
- 3. A confirmation dialog will pop out. Tap on "OK" to start uninstallation.

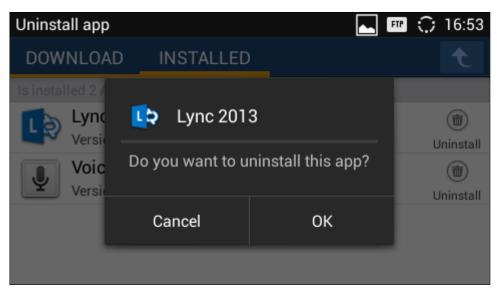


Figure 104: GXV3240 GS Market - Uninstall Applications




This page intentionally left blank



# **TOOLS**

#### **FILE MANAGER**

File Manager is a tool that allows users to delete, move, copy/paste, send and rename files. It helps users to access and manage files in local storage as well as external storage devices (e.g., SD card/USB flash



#### **COPY AND PASTE FILES**

Follow the steps below to copy and paste a file on the GXV3240.

1. Open file manager and navigate to the directory of the file to be copied. Touch and press on the file for about 2 seconds until the checkbox shows up.

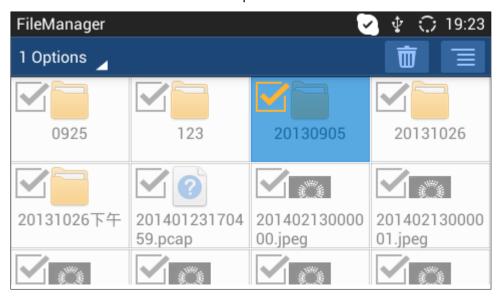


Figure 105: GXV3240 File Manager

- 2. Select the files or folders to be copied. Tap on 1 Options to select all files or unselect all files.
- 3. Tap on and select "Copy". The file will be copied.
- 4. Tap on the root directory to go back to the root directory. Navigate to the destination folder



where you would like to paste the file to.

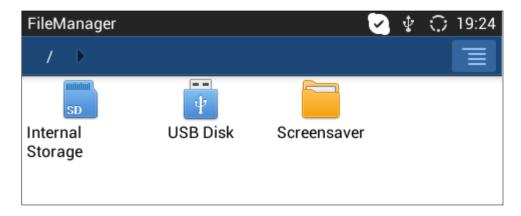


Figure 106: File Manager Root Directory

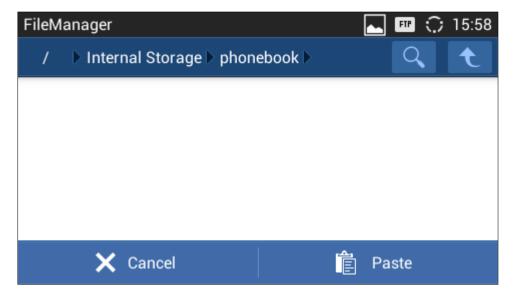


Figure 107: Paste File

#### **MOVE FILES**

The steps to move a file is similar to copy/paste a file. The difference is once the file is moved, the file will not be kept in the source folder. Follow the steps below to move a file on the GXV3240.

1. Open file manager and navigate to the directory of the file to be copied. Touch and press on the file for about 2 seconds until the checkbox shows up.



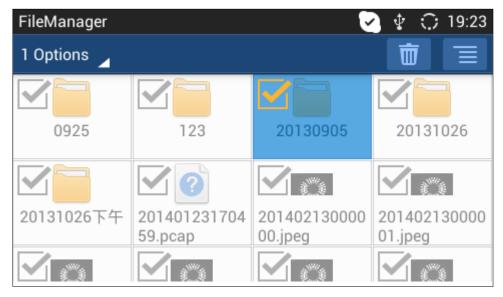


Figure 108: GXV3240 File Manager

- 2. Select the files or folders to be moved. Tap on 1 Options to select all files or unselect all files.
- 3. Tap on and select "Move". The file will be copied.
- 4. Tap on the root directory to go back to the root directory. Navigate to the destination folder where you would like to move the file to.

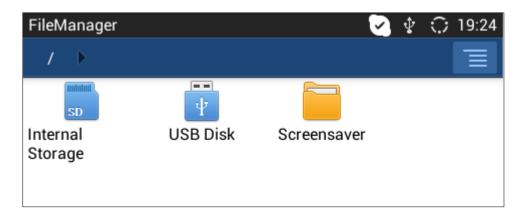


Figure 109: File Manager Root Directory



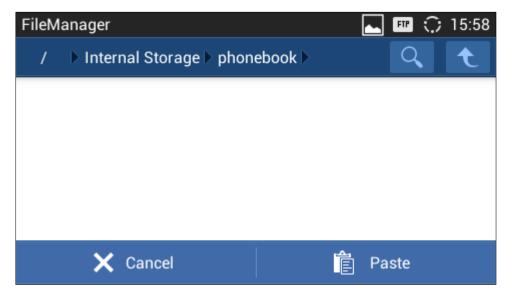


Figure 110: Paste File

#### **SEND FILES**

The users can send a file via Bluetooth or other applications from file manager. Please make sure Bluetooth is turned on and connected to the Bluetooth devices, or the application are set up properly already. Otherwise, users will be directed to set it up before the file can be sent out.

### To send a file:

1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.



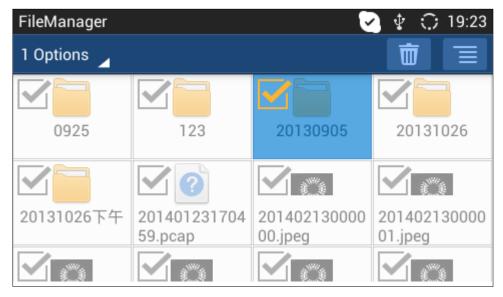


Figure 111: GXV3240 File Manager

- 2. Select the files or folders to be sent. Tap on 1 Options to select all files or unselect all files.
- 3. Tap on and select "Send". A new dialog window will pop up for users to send the file via Bluetooth or other applications.

# **DELETE FILES**

- 1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.
- 2. Select the files or folders to be sent. Tap on 1 Options to select all files or unselect all files.
- 3. Tap on icon. A confirmation dialog will pop up.
- 4. Tap on OK to delete the file(s).



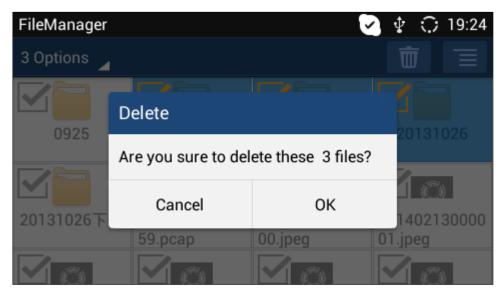


Figure 112: Delete File(s) via File Manager

#### **RENAME A FILE**

- 1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds until the checkbox shows up.
- 2. Tap on and select "Rename". A new dialog window will pop up for users to enter the new name.
- 3. Tap on OK.

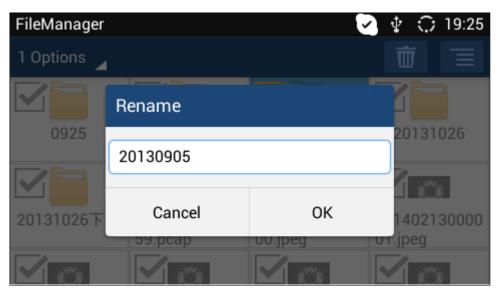


Figure 113: Rename File





Under the File Manager root directory, screensaver is a system folder that users could not create or delete files/folders there.

# **FTP SERVER**

The GXV3240 supports file transfer via FTP server. Once installed, users could access the GXV3240 file system from PC. Tap on the phone's menu or desktop to open FTP Server application.

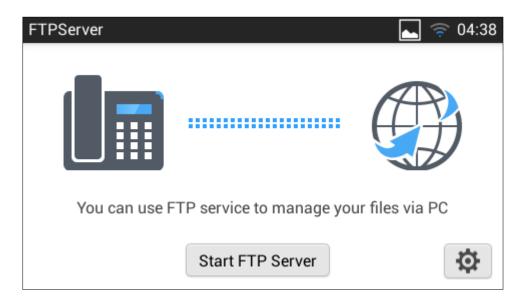


Figure 114: FTP Server - Start

Tap on "Start FTP Server" to turn the server on. The FTP server address URL will be provided on the screen.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 129 of 161





Figure 115: FTP Server - Stop

For security purpose, users could also tap on the above figure to set up username, password, port number and directory for remote access. By default, when the users access the ftp server from a PC, a prompt will show asking for user name and password. The default user name and password are "admin".

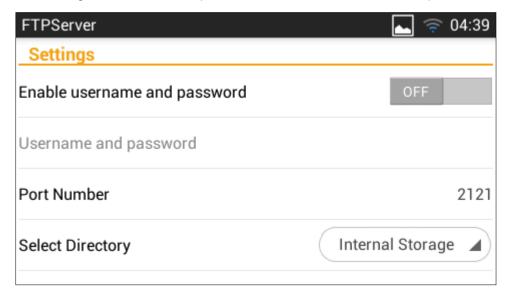


Figure 116: FTP Server - Settings


### **RECORDER**

GXV3240 Recorder application allows users to record audio and access recording files from call

Firmware Version 1.0.3.6 GXV3240 User Guide Page 130 of 161



recording. There is no time limits on the recorder as long as there is enough space to save the recording



### **NORMAL RECORDER**

Normal recorder shows the recording files recorded using the Recorder application.

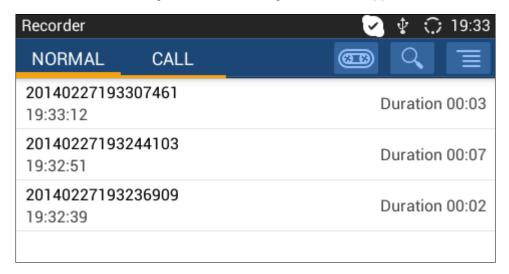


Figure 117: Normal Recorder

To use the recorder app to record audio, tap on open the recorder.

1. Tap on to start recording.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 131 of 161



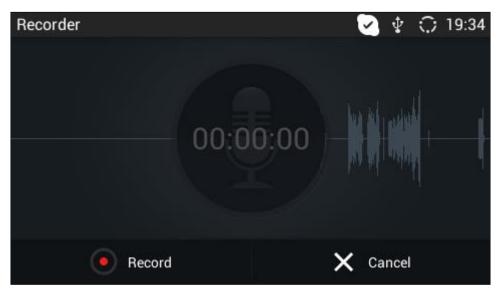


Figure 118: Normal Recorder - Start Recording

2. Tap on "Save" to end recording.

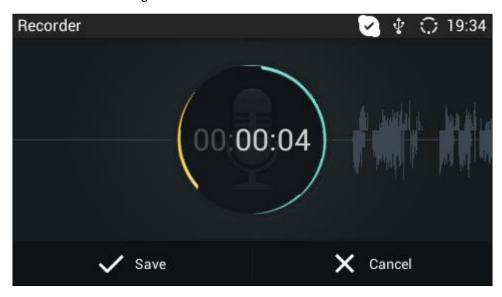


Figure 119: Normal Recorder - End Recording

3. The file will be saved and accessible under Recorder application "Normal" category. Tap on the recording file to play the recording.

### **CALL RECORDER**

During an active call, users have the option to record the conversation. The recorded conversation can be

Firmware Version 1.0.3.6 GXV3240 User Guide Page 132 of 161



#### retrieved here.



Figure 120: Call Recorder

### **DOWNLOADS**

The Downloads application can be opened by tapping on the phone's menu or desktop. The files (such as PDF documents, pictures) downloaded from the browser will be stored in the internal storage and can be access from Downloads application.



Figure 121: Downloads

- Tap on the file to open it.
- Tap on the checkbox to select the file. Then users could delete or share the file.
- Tap on "Sort by size" or "Sort by date" to sort the downloaded files.



#### **IP LOCATION**

The IP Location application provides users with a tool to resolve the public IP address to the location. Tap



on the phone's menu or desktop to launch the IP Location application.

In the IP Location application, users could simply enter the public IP address and then tap on **Search** to view the result. Based on the IP address provided, the following information will be given: **Country**, **Region**, **City**, **Latitude**, **Longitude**, **Time Zone** and **Weather Code**. This information is useful when configuring the phone to provide personalized settings based on user's location.



Figure 122: GXV3240 Location

For example, in the above figure, the public IP address 67.110.250.152 is mapped to Yorba Linda in California, USA. The time zone is UTC-07:00 and the weather code is USA1267.

### **DIAGNOSIS**

The GXV3240 provides a built-in diagnosis application for users to troubleshoot hardware issues related

to LCD, keypad, and touch screen, LED as well as extension board connection. Tap on the phone's menu or desktop to launch Diagnosis application. The following figure shows the diagnosis menu. After selecting the option, users could follow the diagnosis instruction to troubleshoot the device.



LCD Diagnosis
LCD Off
Keypad Diagnosis
Touch Screen Diagnosis
LED Diagnosis
BLE Expansion Board Diagnosis

Figure 123: GXV3240 Diagnosis



This page intentionally left blank



# **CAMERA**

The GXV3240 has built-in Camera to support taking pictures and recording videos. Users can also use the camera during SIP video calls as well as video calls via 3rd party applications such as Microsoft Lync.

To access Camera to take pictures and videos, tap on Camera icon on the desktop or phone's menu.

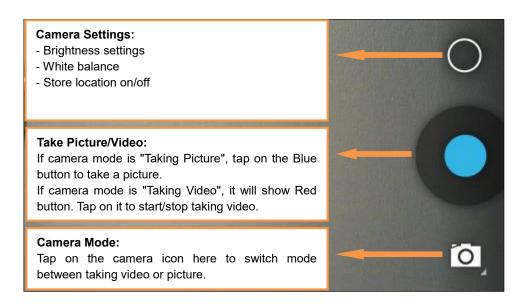


Figure 124: GXV3240 Camera

#### **TAKE PICTURE**

- 1. Select the camera mode as to take picture.
- 2. Tap on the Blue button to take a picture.
- 3. The captured picture can be accessed under FileManager->Internal Storage->DCIM->Camera.

### **RECORD VIDEO**

- 1. Select the camera mode as to record video.
- 2. Tap on the Red button to start/stop recording.
- 3. The recorded video can be accessed under FileManager->Internal Storage->DCIM->Camera.



### **CAMERA SETTINGS**

Tap on icon to bring up camera settings.

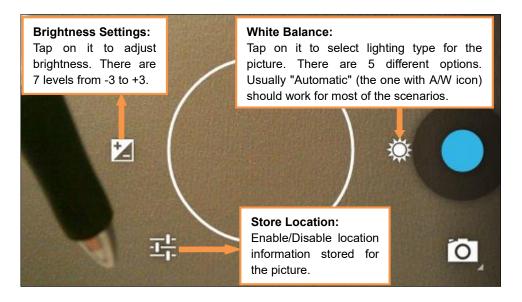


Figure 125: GXV3240 Camera Settings

# **ANGLE ADJUSTMENT**

On the back of the GXV3240 camera, users could scroll the wheel up/down to adjust the camera angle. If users scroll the camera all the way up until the icon shows up on the status bar of the screen, the camera is turned off.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 138 of 161



# **MULTIMEDIA**

### **GALLERY**

The GXV3240 has built-in Gallery application for users to take pictures/videos, view pictures and play videos from GXV3240 internal storage or USB/SD card storage. Users could also perform basic editing tasks on pictures and set them as wallpaper or picture for contacts. The pictures can be easily shared with friends in Gallery app by sending via Bluetooth and Email.



on the phone's menu or desktop to launch the gallery application on the GXV3240.

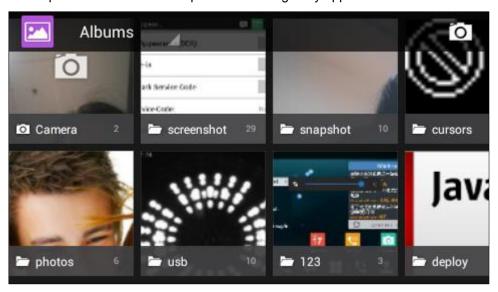


Figure 126: GXV3240 Gallery

### Gallery albums

The image related folders in the GXV3240 will be present in Gallery as thumbnails. Users can tap on the thumbnail to access the folder.

### View pictures

After accessing the album, slide left/right to view all the pictures. Users could select "Grid" or "Filmstrip" view mode to display the pictures. Tap on a specific picture to view the picture in full screen.

### Edit picture



When the picture is displayed in full screen, tap on the screen again. On the lower left corner, users will see icon

Tap on it and users can crop/rotate/add effect to the picture.

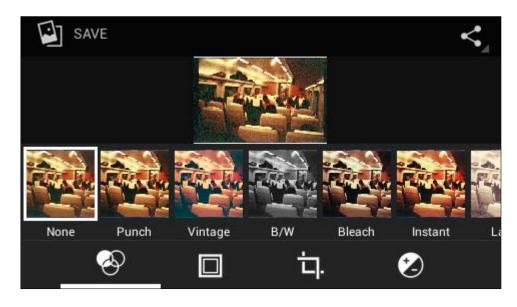


Figure 127: GXV3240 Gallery - Edit Picture

# • Picture Options

When the picture is displayed in full screen, press the Menu button . A list of options will be available for users to select, including "Delete", "Edit", "Rotate", "Crop" or "Set Picture as" and etc.

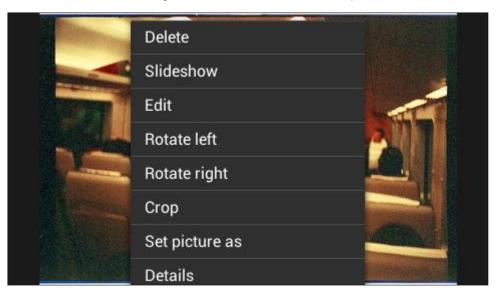


Figure 128: GXV3240 Gallery - Picture Options

# • Take picture/video

Firmware Version 1.0.3.6 GXV3240 User Guide Page 140 of 161





### • Select multiple pictures

Touch and press on one of the pictures for about 2 seconds until the picture is highlighted. Tap on other pictures to select multiple pictures. On the upper right of the Gallery app, users can tap to share the pictures, or tap to delete the selected pictures

### Share pictures

Tap on the upper right of the picture to send the picture via Bluetooth or 3rd party applications.

# **MUSIC**

The GXV3240 has built-in music player to support audio files in AAC, MP3, AMR, WAVE, MIDI and Vorbis format. Tap on the phone's menu or desktop to launch Music application.

### **PLAY MUSIC**

- 1. Download music to have the music files ready in USB flash drive/SD card plugged into the GXV3240.
- 2. Open Music application.
- 3. Tap on 🔳 and select "Refresh". The music files will be displayed in the list.



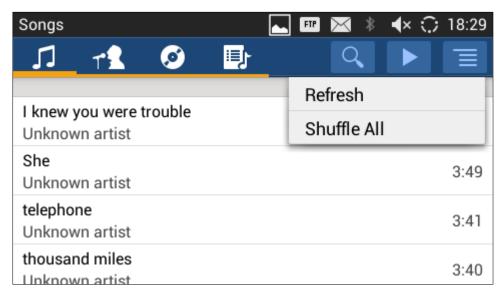


Figure 129: GXV3240 Music - Refresh Music List

4. Select a song and tap to play the song.

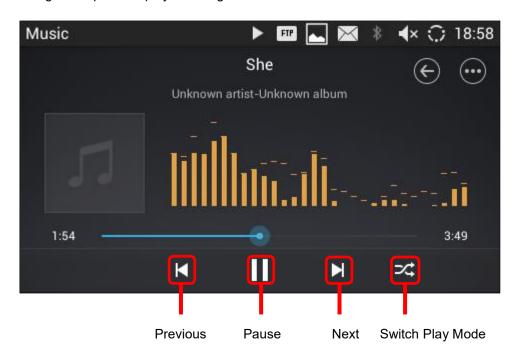


Figure 130: GXV3240 Music - Play a Song

### **EDIT MUSIC**



- 1. In the music list, touch and press on one of the music file until the checkbox displays.
- 2. Tap on and users will be able to "Play" the music, "Add To PlayList" and "Save As Ringtone".

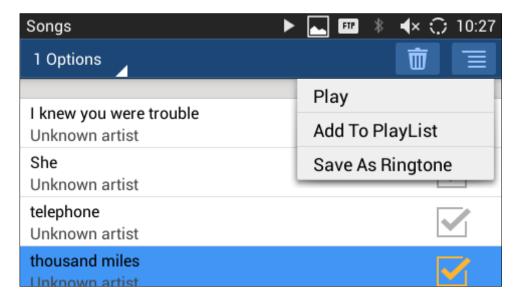


Figure 131: GXV3240 Music - Options

# **SORT MUSIC**

On the top menu of the Music application, users can sort music by "Song", "Artist", "Album" and "Playlist".

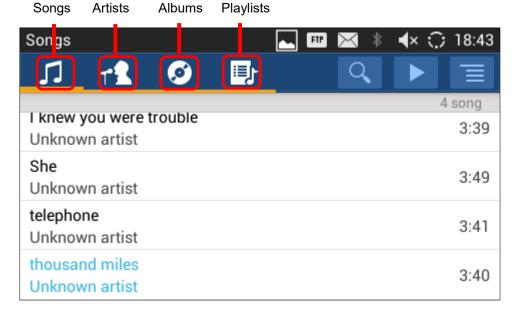


Figure 132: GXV3240 Music - Sort Songs

Firmware Version 1.0.3.6 GXV3240 User Guide Page 143 of 161



### **SEARCH MUSIC**

- 1. Tap I to access the lists of songs.
- 2. Tap on and enter the name of the song to search.

### **CREATE PLAYLIST**

- 1. Tap to access Playlists.
- 2. Tap to create a new playlist.

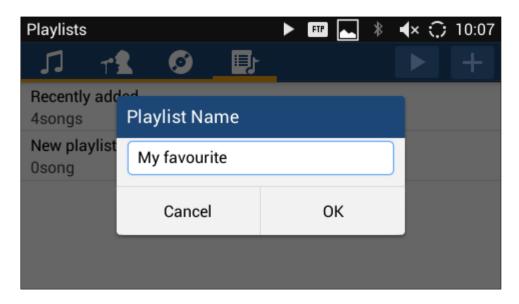


Figure 133: GXV3240 Music - Create Playlist

### **EDIT PLAYLIST**

- 1. Tap to access Playlists.
- 2. Touch and press one of the playlist for about 3 seconds to select it.
- 3. Press to bring up options to play the playlist or rename the playlist.
- 4. Tap 🗓 to delete the selected playlist.

Once the playlist is created, users can touch and press it for about 3 seconds



### **BROWSER**

GXV3240 browser could be used in a similar way as a PC-based web browser, i.e., open web pages,

bookmarks, view history, search and etc. Tap on the phone's menu or desktop to launch the Browser application.



Figure 134: GXV3240 Web Browser

- Touch the screen and scroll up/down/left/right to view the web page.
- Double tap on the screen to zoom in/zoom out. Or use two fingers on the screen to pinch in or spreading out the page.
- Press the MENU button to access more options including bookmarks, share the page and etc.

Firmware Version 1.0.3.6 GXV3240 User Guide Page 145 of 161



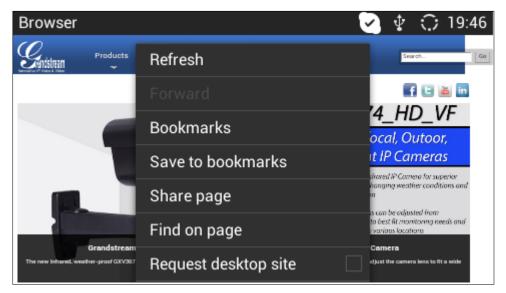


Figure 135: GXV3240 Browser Menu Options

• To open a new window, tap on icon on the upper right corner of the Browser. Then select to open the new window.

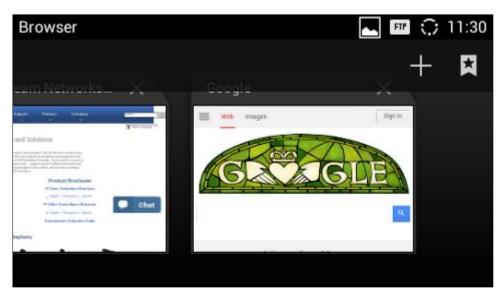


Figure 136: Open New Window in Browser

• To open **Bookmarks**, **History** and **Saved Pages**, tap the icon and then on the upper right of the Browser.



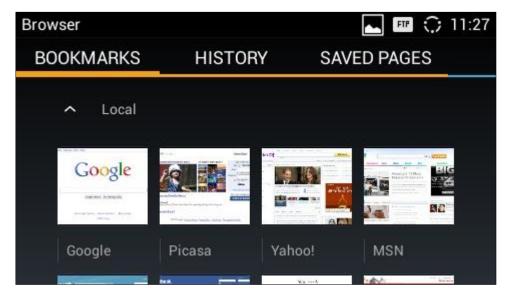


Figure 137: GXV3240 Web Browser-Bookmarks

### **RSS NEWS**

### ADD RSS WIDGET

- 1. On the GXV3240 idle screen, press Settings button and select "Edit Widgets".
- 2. A list of widgets will show on the bottom of the screen. Swipe left/right to find the "RSS News" widget.
- 3. Touch and drag it to the idle screen. Please make sure there is enough space on the idle screen to place the widget.

# **USE RSS WIDGET**

On the RSS widget, users can tap on icon to refresh the page, scroll up/down to view the abstract of the news, and tap on the news to access the detailed content.





Figure 138: GXV3240 RSS News

### **RSS WIDGET SETTINGS**

On the RSS News widget, tap on sto access RSS News settings.

- **Update Interval:** Configure the interval to refresh the news. The valid range is from 10 minutes to 24 hours.
- Page-turning Intervals: Configure the page-turning speed on the widget when it displays different pages of news.
- Subscribe: Select the categories of the news you would like to display on the RSS News.
- RSS Feed: Tap on the URL field on the bottom of the screen and enter the link of a new RSS feed.

Then tap on icon to add it to the category of the RSS feed.



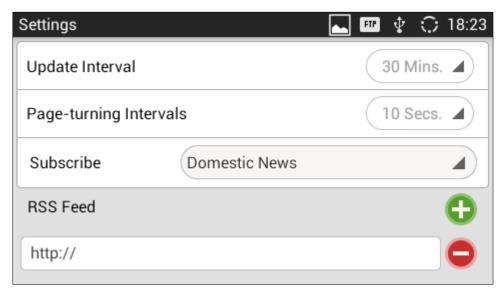


Figure 139: GXV3240 RSS News Settings

#### WEATHER

GXV3240 has a built-in Weather widget that provides weather information includes humidity, wind direction, wind speed (mph) and temperature in unit as configured by the users.

### ADD WEATHER WIDGET

- 1. On the GXV3240 idle screen, press Settings button and select "Edit Widgets".
- 2. A list of widgets will show on the bottom of the screen. Swipe left/right to find the "Weather" widget.
- 3. Touch and drag it to the idle screen. Please make sure there is enough space on the idle screen to place the widget.

## **USE WEATHER WIDGET**

On the Weather widget, tap on to refresh the weather information. Users can also tap on the widget to access the settings.





Figure 140: GXV3240 Weather

#### **WEATHER SETTINGS**

Tap on the weather widget to access settings. Users will see four softkeys on the bottom of the screen.



Figure 141: GXV3240 Weather Settings

- "Update": Tap to refresh the weather information.
- "Share": Tap to share the weather information with other users.
- "Add City": Tap to add city for the location you would like to check the weather.



• "Settings": Tap on configure temperature unit and update interval time.



Figure 142: GXV3240 Weather Update Settings



This page intentionally left blank



# **CONNECT TO NETWORK AND DEVICES**

The GXV3240 supports a variety of network connections (Ethernet, Wi-Fi) and device connections, including EHS headset (Plantronics and Jabra), USB, SD card and Bluetooth device. Users can connect the GXV3240 to transfer files from/to the GXV3240 using a USB connection, SD card or Bluetooth.

### **ETHERNET**

Ethernet connection is turned on as DHCP by default. If you would like to use Ethernet connection for network access, please make sure the Ethernet cable is plugged in to the LAN port on the back of the GXV3240.

To configure Ethernet settings on GXV3240 LCD:

- 1. Go to GXV3240's Settings application->Wireless & Network->Ethernet Settings.
- 2. Touch IPv4 settings.
- 3. Tap on "Address Type" to select DHCP, Static IP or PPPoE as the address type.
  - For DHCP, save the setting and the GXV3240 should be able to get IP address from the DHCP server in the network.
  - For static IP, enter IP Address, Subnet Mask, Default Gateway, DNS Server and Alternative DNS server for the GXV3240 to correctly connect to network.
  - ➤ For PPPoE, enter PPPoE account ID and password so the GXV3240 can get IP address from the PPPoE server.

### WI-FI

WI-FI is supported and built-in on the GXV3240. GXV3240 can be connected to network if Wi-Fi is available within the area.

### TURN ON/OFF WI-FI

- 1. Go to GXV3240's **Settings**.
- 2. Touch Wireless & Network.
- 3. Check or uncheck the option for Wi-Fi.

Or, users could open the top status bar->System Settings and tap on WI-FI icon



to turn it on/off.



#### ADD WI-FI NETWORKS

- 1. Once Wi-Fi is turned on, GXV3240 will automatically start the scanning within the range.
- 2. Go to GXV3240's **Settings**.
- 3. Touch Wireless & Network.
- 4. Touch Wi-Fi Settings.
- 5. A list of Wi-Fi networks will be displayed as scanning result. Tap on the SSID and enter the correct password information to connect to the selected Wi-Fi network.
- 6. The phone will start connecting to the Wi-Fi. The status bar will show Wi-Fi signal strength.
- 7. Once it's added and the password is remembered, the GXV3240 will connect to it again when the SSID is within the range.

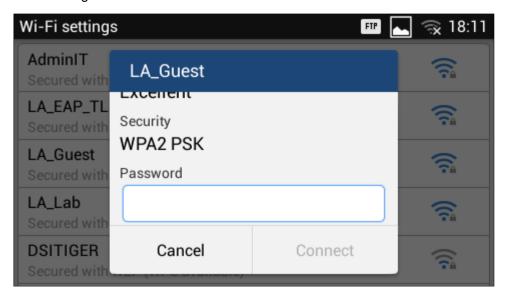


Figure 143: GXV3240 Connect to Wi-Fi

8. The previous steps allow the GXV3240 to connect the WiFi network with DHCP setting by default. If it needs to connected the WiFi with static IP or PPPoE setting, please scroll down the setting window and tap to check the "Show advanced options". Then the window will show up the IP settings at the bottom. If the Static is selected, the system will require end user to input IP address, Gateway, Network prefix length and DNS 1 and DNS 2 addresses. If the PPPoE is selected, the system will require end user to input PPPoE account ID and password.



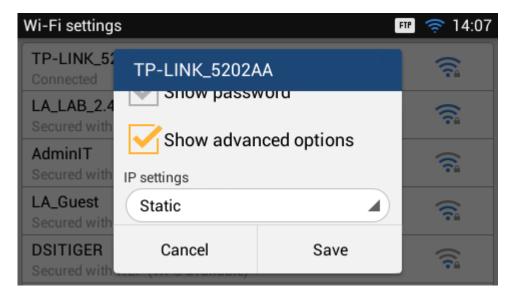


Figure 144: GXV3240 Connect to Wi-Fi Show Advanced Options

9. If there is a need to modify the saved WiFi network setting, the end user should tap and long press the SSID bar in the Wi-Fi setting page. The system will pop up a prompt and then user needs to tap the "Modify Network". Then the phone system will pop up a new window to allow user to check the current WiFi parameters and to change the setting by checking the "Show advanced options" at the bottom.

For more information about how to use Wi-Fi on the GXV3240, please refer to the link below: <a href="http://www.grandstream.com/products/gxv">http://www.grandstream.com/products/gxv</a> series/gxv3240/documents/gxv3240 wifi guide.pdf

### **BLUETOOTH**

Bluetooth is a proprietary, open wireless technology standard for exchanging data over short distances from fixed and mobile devices, creating personal area networks with high levels of security. The GXV3240 supports Bluetooth Class 2, version 4.0 + EDR. Users could use Bluetooth to transfer files, share contact information with other Bluetooth portable devices, use Bluetooth headset for making calls, switch calls to the GXV3240 from mobile devices using Bluetooth hands-free profile, and listen to media (music or other audio output) from the GXV3240.

To connect to a Bluetooth device, turn on GXV3240's Bluetooth radio first. The first time when using a new Bluetooth device with the GXV3240, "pair" the device with GXV3240 so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device. Turn off Bluetooth if it's not used.



Bluetooth related settings are under GXV3240's Settings-> Wireless & Network.

### TURN ON/OFF BLUETOOTH

- 1. Go to GXV3240's Settings.
- 2. Touch Wireless & Network.
- 3. Check or uncheck the option for Bluetooth.

Or, users could open the top status bar->System Settings and tap on Bluetooth icon



to turn it on/off.

### **CHANGE BLUETOOTH DEVICE NAME**

The GXV3240 uses "GXV3240" as Bluetooth device name by default. The device name will be visible to other devices when connecting them. Follow the steps below to change the name:

- 1. Go to GXV3240's **Settings**.
- 2. Turn on Bluetooth.
- 3. Select Wireless & Network->Bluetooth settings.
- 4. Press Menu button and tap on "Rename phone".
- 5. Enter a name and tap on "Done".

#### PAIR GXV3240 WITH A BLUETOOTH DEVICE

Before connecting GXV3240 with other Bluetooth device, users must pair them first. They will stay paired afterwards unless they are unpaired.

- 1. Go to GXV3240's **Settings**.
- 2. Select Wireless & Network and turn on Bluetooth.
- 3. Tap on Bluetooth settings.
- 4. Tap on the Bluetooth device to make it visible to all nearly Bluetooth devices.
- The GXV3240 scans and displays the IDs of all available Bluetooth devices in range. If the device you would like to pair with does not show up in the list, ensure that the other device is turned on and set to be discoverable.
- 6. If the GXV3240 stops scanning before the other device is ready, press Menu button and select "Search for devices".
- 7. Once the Bluetooth device shows up in the result, tap on it to start pairing. Confirm the passkey in the



prompted message (if any). Or If passcode is required, please refer to the device's documentation or other procedures to obtain the passcode.

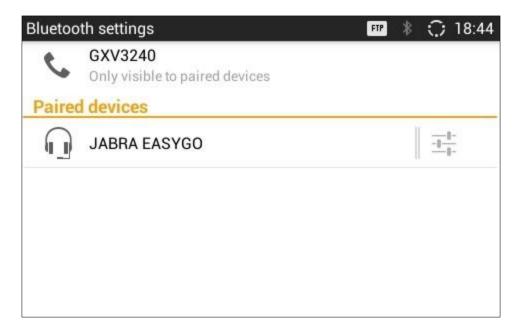


Figure 145: GXV3240 Bluetooth - Paired Device

### **UNPAIR A BLUETOOTH DEVICE**

- 1. In the Bluetooth settings, tap on the Bluetooth device.
- 2. Tap on Unpair.

For more information about Bluetooth feature on the GXV3240, please refer to the link below: http://www.grandstream.com/products/gxv series/gxv3240/documents/gxv3240 bluetooth guide.pdf

### **EHS HEADSET**

The GXV3240 supports normal RJ9 headset and EHS headset (Plantronics and Jabra). To use EHS headset:

- 1. Go to the GXV3240 web GUI->Maintenance->Device Manager: Headset Type. Select "Plantronics EHS" or "Jabra EHS" and reboot the phone to take effect.
- 2. Connect EHS Headset to GXV3240. Insert headset connector into the RJ9 headset port on the back of GXV3240.
- 3. To switch to headset mode, press headset button on the GXV3240. A headset icon will

Firmware Version 1.0.3.6 GXV3240 User Guide Page 157 of 161



show on the GXV3240 status bar. There are two different headset mode for users to select from web GUI-> **Maintenance**->**Device Manager**: Headset Key Mode. After selecting the desired mode, save the change and reboot the phone to take effect. Please go to <a href="http://www.grandstream.com/support">http://www.grandstream.com/support</a> and refer to "GXV3240 Administration Guide" for the key mode details.

### **USB**

The GXV3240 supports USB connection with USB storage devices. To connect and access USB storage device:

- 1. Insert USB storage device into USB port at the back of the GXV3240.
- 2. It will take a few seconds for the GXV3240 to prepare the connection. Then the USB storage icon will show on the status bar.
- 3. To access USB storage, go to GXV3240 MENU->File Manager->USB Disk. Tap on it to access and manage your data.

### **SD CARD**

- 1. Insert your SD card into SD Card slot at the back of GXV3240. Please make sure the SD Card is inserted with right direction on the GXV3240 as indicated on the SD card slot.
- 2. It will take a few seconds for the GXV3240 to prepare the connection. Then the SD Card icon will show on the status bar.
- To access SD Card, go to GXV3240 MENU->File Manager->sdcard. Tap on it to access and manage your data.

### **HDMI DEVICE**

- 1. Plug one end of the mini HDMI cable into the mini HDMI port on the GXV3240.
- 2. Plug the other end of the mini HDMI cable into the HDMI port on the LCD display or TV. You might need adjust the resolution on the LCD display or TV for proper display.
- 3. On the GXV3240, go to **Settings->Display**. Make sure the HDMI is turned on. A HDMI icon will show on the top status bar HDMI.



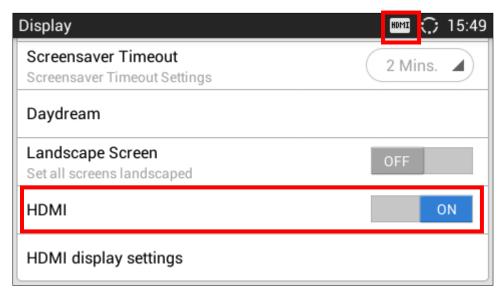


Figure 146: Settings->Display->HDMI

4. In LCD **Settings->Display**, tap on "HDMI Display Settings", an adjusting bar will show on the screen. Scroll to the left or right to adjust the display on the output TV or LCD screen. Once done, tap on OK.

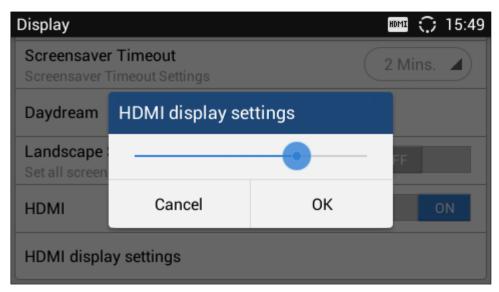


Figure 147: Settings->Display->HDMI Display Settings

5. When the phone uses speaker, the audio output will be using the HDMI output device.



This page intentionally left blank



# EXPERIENCING THE GXV3240 APPLICATION PHONE

Please visit our website: <a href="http://www.grandstream.com">http://www.grandstream.com</a> to receive the most up- to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our <u>product related documentation</u>, <u>FAQs</u> and <u>User and Developer Forum</u> for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or <u>submit a trouble ticket online</u> to receive in-depth support.

Thank you again for purchasing Grandstream Enterprise Application phone, it will be sure to bring convenience and color to both your business and personal life.

<sup>\*</sup> Skype and Lync are Registered Trademarks of Microsoft Corporation.



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

<sup>\*</sup> Android is a trademark of Google Inc.